



15-16 Coolant Reservoir Cover

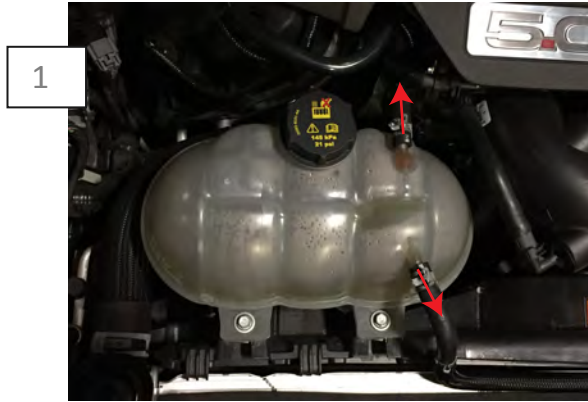

1 Using a pair of pliers, remove the (2) hoses connected to the coolant tank. ****Note: Some coolant will leak up, have some paper towels on hand.**

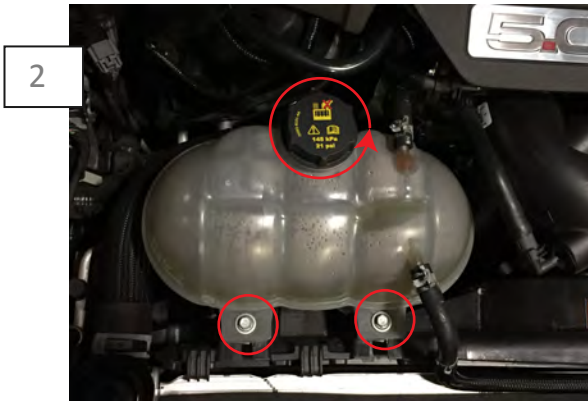

2 Remove the (2) 10mm bolts holding the coolant reservoir to the fan shroud.



3 Remove the coolant cap, install the reservoir cover. Re-install coolant cap.



4 Re-install the coolant reservoir bolts and reconnect coolant lines.