


15-20 Billet Fuel Door

REQUIRED Flat Head Screw Driver



1 Open the factory fuel door. Using a small flat head screw driver, apply light pressure up on the center clip.

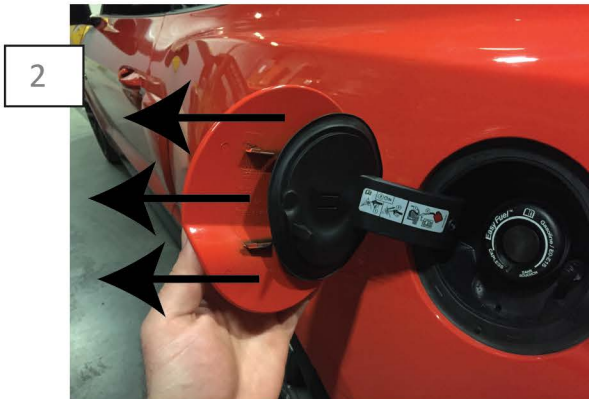

2 With the center clip upped up from step one, slide the factory fuel door off the fuel door hinge.



3 Line up the billet fuel door's (4) alignment tabs. Slide the fuel door onto the hinge until it clips.



4 Slowly close fuel to ensure proper quarter panel clearance. Installation is now complete.