

**JLT Oil Separator 3.0 Passenger Side
2018-2020 Mustang GT & Bullitt
#3024P**

Installation Instructions

Video install can also be viewed on our website jlttruecoldair.com. See product details.

Remove engine cover, pop two plastic tab inserts up. Remove two 10mm nuts, oil cap and pull engine cover up and out. Remove stock PCV line you are replacing by releasing the plastic tabs and pull the hose off the fittings. Next, install new JLT assembly in its place. Done!

TO CHECK TANK: HOLD TOP FIRMLY AND UNSCREW BOTTOM.




ADJUSTMENTS:

Hoses and fittings can move in shipping, but they are designed to swivel for final adjustment.

All hoses and fittings can rotate 360°. To adjust FORD connector, hold hose and twist connector. To adjust hose, hold fitting or separator and twist on the fitting. Also, if after the initial install your Oil Separator seems to be tilted up, it may "relax" on its own after the first drive cycle once everything gets warm.

BULLITT INSTALL NOTE - Route hose under throttle body plug for proper install, it maybe easier to unplug this wire and route it over top of the connection after the oil separator has been installed

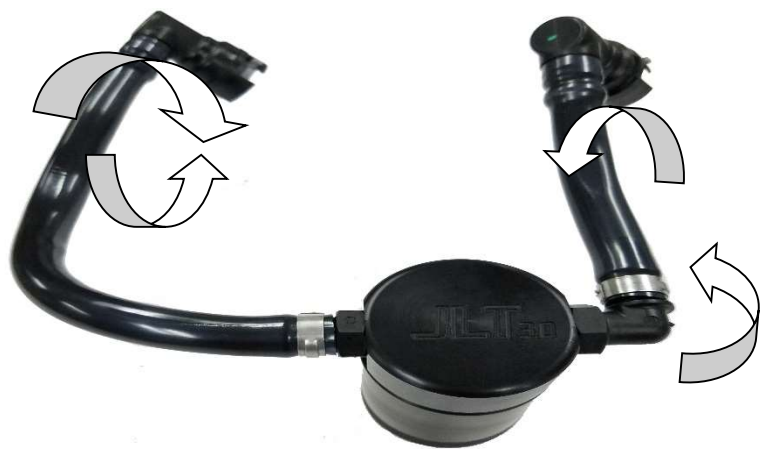

If you have any questions on this product, please call 757-335-1940 or e-mail info@JLTtruecoldair.com. Hours are Monday-Friday. 8:00am – 5:00pm Eastern Time. To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles. Thanks for the business.

JLT Performance Lifetime Satisfaction Guarantee. We want you to be a JLT Performance customer for life! Your new JLT Performance product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here. www.jlttruecoldair.com/warranty
We guarantee workmanship, tunability and even a pathway to discounted upgrades for substantially improved items.

Return Policy: All returns will be subject to a 10%-25% restocking fee. Please visit www.JLTtruecoldair.com for complete return policy.

Disclaimer: JLT Performance Inc. makes no warranties whatsoever, expressed or implied, oral or written to any purchasers, except the warranty above. JLT Performance Inc. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by JLT Performance Inc. agree to hold harmless and indemnify JLT Performance Inc. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to JLT Performance Inc. for any claims arising out of use of its products.