



Starter Replacement Instructions

1. Remove the negative battery terminal from the battery and secure it out of the way, ensuring that it doesn't accidentally make contact with the negative terminal.
2. Reference the owner's manual to raise and support the front of the vehicle using a jack and jack stands.
3. Locate and remove the trigger wire from the starter.
4. Locate and remove the positive solenoid cable from the starter
5. Loosen and remove the bolts securing the starter to the bell housing. Remove the starter.
6. Compare the starter that was removed from the vehicle to the SR Performance starter. Confirm that the starter is roughly the same size and has same mounting hole locations as well as the same wire terminal locations.
7. Reinstall the starter in reverse order. ****Note:** Do not over tighten the solenoid wiring nuts. Doing so can break the solenoid studs.