

Contents:


- (1) Driver Side Seat Cover
- (1) Passenger Side Seat Cover
- (2) Head Rest Covers



Step 1\\

Begin by removing the headrest on each side by applying pressure on the clips to release the headrest from the guides.

Black Seat Covers (99-04 Mustang Coupe)

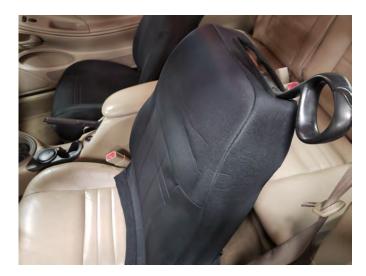


Step 2\\

With the headrest still removed, pull over the upper seat cover portion. Tuck the seat cover under and around the headrest guide. Tuck the seat cover around the upper seat belt loop.




Step 3\\

Reinstall the headrest to the seat by sliding the rod through the headrest guide. Then carefully stretch the headrest cover over the headrest and center the cover.

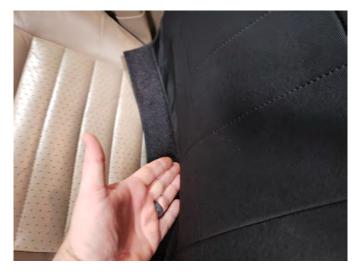

Step 4\\

Secure the upper portion of the seat cover by tucking the velcro sleeve in-between the upper and lower parts of the seat and velcro in place.

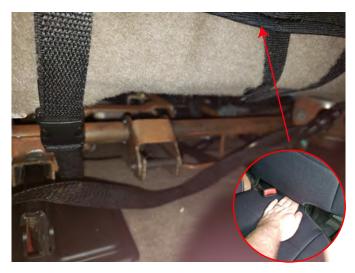

Step 5\\

Install the lower portion of the seat cover to the seat. Tuck the two buckles through the upper and lower seat joint. Route the straps under the seat from front to back. Tuck the seat cover around the seat lever. Connect the (2) front to back and (1) side to side clips to secure the seat cover to the lower portion of the seat. Then pull tight on the strap to ensure the seat cover is tight to the seat.



Step 6\\ Installation is now complete.