
• RLTERUM

Contents:

- (1) Driver Side Seat Cover
- (1) Passenger Side Seat Cover
- (2) Head Rest Covers



Step 1Begin by removing the headrest on each side by applying pressure on the clips to release the headrest from the guides.

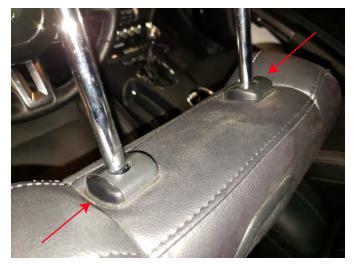




Step 2With the headrest removed, insert the headrest covers over each headrest and secure by attaching velcro at the seams.



Step 3With the headrest still removed, pull over the upper seat cover portion. Tuck the seat cover under and around the headrest guides. Tuck the seat cover around the upper seat release, and seat belt loop.

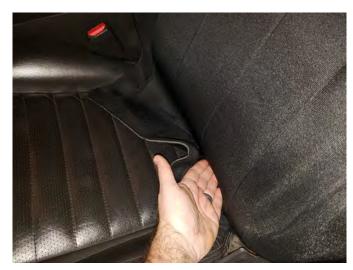

Step 4Secure the upper portion of the seat cover by tucking the velcro sleeve in-between the upper and lower parts of the seat and velcro in place.



Step 5\\
Install the lower portion of the seat cover to the seat. Tuck the two buckles through the upper and lower seat joint.
Route the straps under the seat from front to back. Tuck the seat cover around the seat lever. Connect the (2) front to back and (1) side to side clips to secure the seat cover to the lower portion of the seat. Then pull tight on the strap to ensure the seat cover is tight to the seat.



Step 6 Installation is now complete.