


ALTERUM

Contents:

- (1) Driver Side Seat Cover
- (1) Passenger Side Seat Cover
- (2) Head Rest Covers

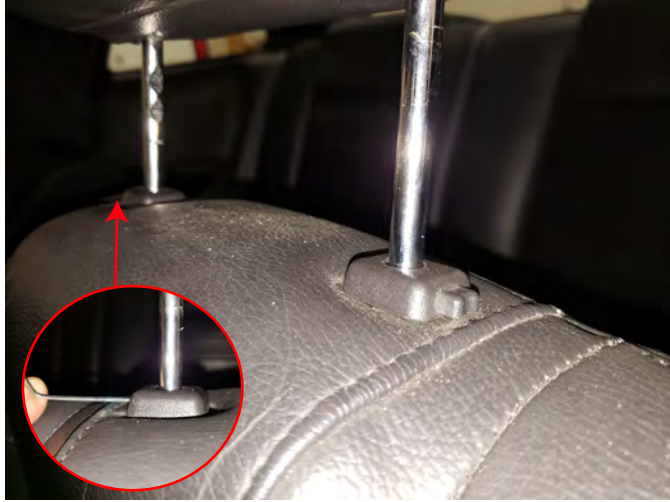

Step 1\\

Begin by removing the headrest on each side. You will need to use a small allen wrench to insert into the guide to release the spring. This will allow you to fully remove the headrest.



Step 3\\


With the headrest still removed, pull over the upper seat cover portion. Tuck the seat cover under and around the headrest guides.

Black Seat Covers (05-14 Mustang w/Airbag) (05-14 Mustang w/o Airbag)



Step 2\\

With the headrest removed, insert the headrest covers over each headrest and secure by attaching velcro at the seams.

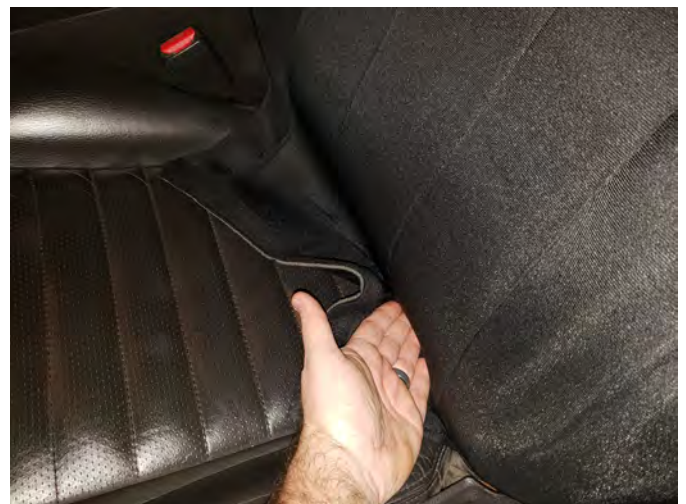

Step 4\\

Secure the upper portion of the seat cover by tucking the velcro sleeve in-between the upper and lower parts of the seat and velcro in place.



Step 5

Install the lower portion of the seat cover to the seat. Tuck the two buckles through the upper and lower seat joint. Route the straps under the seat from front to back. Tuck the seat cover around the seat lever. Connect the (2) front to back and (1) side to side clips to secure the seat cover to the lower portion of the seat. Then pull tight on the strap to ensure the seat cover is tight to the seat.



Step 6

Installation is now complete.