

LED Projector Headlights

(18+ Mustang)

Contents:

- (1) Driver Side Headlight
- (1) Passenger Side Headlight

Tools Required:

- 5.5mm, 7mm, 8mm, 10mm, and 13mm Sockets
- 1/4" or 3/8" Ratchet & Extensions
- Trim Panel Removal Tool
- Jack & Jack Stands
- Phillips Head Screw Driver




Step 1

Remove the (8) clips securing the plastic radiator cover to the radiator support and remove it from the vehicle.



Step 2

Remove the (6) 8mm and (2) 5.5mm bolts securing the bumper cover to the radiator support.

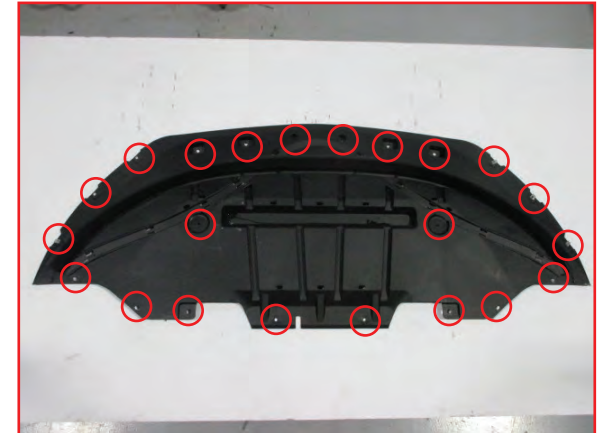

Step 3

Support the front of the car so you can access the bumper splash shield. **Note there are two versions of the splash shield. Both are attached to similar locations.



Step 4

On each side of the bumper, remove the plastic clips holding the fender liner to the bumper.



Step 5

From the top between the fender, locate and remove the (2) 10mm nuts then remove the bracket.



Step 6

With the splash shield removed, you can access the plugs for the turn signals and fog lights. Then remove bumper.



Step 7

Once the bumper cover is ready to remove, using firm pressure pull the edge of the bumper down to pop it from the clip. Have a helper support one side so that you don't scratch the paint. Slowly remove the bumper and support it on a soft non-abrasive surface.



Step 8

Remove the factory headlight from the vehicle using a 10 and 13mm socket.



Step 9

Once the headlight is unbolted from the vehicle unplug and remove the wiring harness from the light.



Step 10

Install the new headlight in reverse order using the factory mounting hardware.



Step 11

Using a Phillips or Allen key, use the attached adjustment screw to adjust the headlight to the factory specifications which can be found in the owners manual.