

## MSD Replacement Cap & Rotor (86-95 5.0L)

**Time Needed:** About 1 hour

**Tools Needed:** Phillips screwdriver



### **Removal Procedure:**

Step 1: On the cap there are two levers you will need to pop off by using your fingers.



Step 2: With the two levers released pull the cap off the distributor exposing the rotor



Step 3: Grab the rotor with your hand and pull it off.



## Installation Procedure:

Step 1: Take the new rotor and push it on, there is only one way it can go on.



Step 2: Next take the new MSD cap and make sure it is oriented correctly. There is a square notch on the edge of the MSD cap, make sure this notch is in the same position as the old cap.



Step 3: With the cap oriented correctly take the plug wire to the left of the notch and transfer it over to the MSD cap from the old cap.



Step 4: With the first wire transferred over, start by going counterclockwise transferring all of the other wires to the new MSD cap.





Step 4: Pic continued



Step 5: After all wires have been transferred to the new cap, line the cap up with the distributor and set it down



Step 6: Push the levers back over the cap so it's secured to the distributor



Step 6: Pic Continued



**Optional installation: Install at your preference**

Step 1: Remove the center wire off the New MSD cap

Step 2: take the center wire and slide it into the bracket that snaps into the new MSD cap.



Step 3: take the MSD wire retainer/trim piece and place it over the cap.

Step 4: with the two screws supplied insert them into the two holes and tighten



Step 5: Snap the Center wire into the Cap.





Step 6: Enjoy



**Installation Instructions written by AmericanMuscle Customer Vance Clark 10.30.2014**