



CORRECT BEARING INSTALLATION IN CLUTCH FORK

A common cause of release bearing failure and non-release of clutches is improper installation in the clutch fork. The spring clips MUST be installed in the bearing slot and not around the rear of the bearing in order for the clutch to function properly.

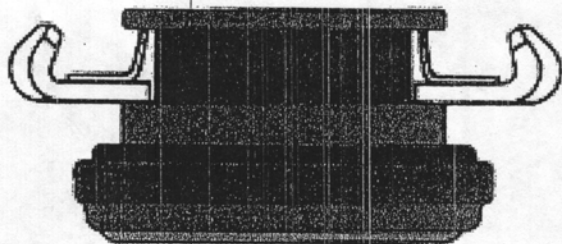

Correct installation

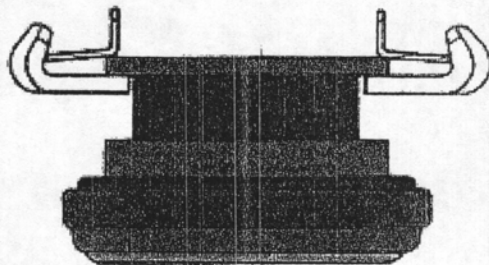

Incorrect installation