



15-16 Billet Fuel Door

REQUIRED Flat Head Screw Driver

1



Open the factory fuel door. Using a small flat head screw driver, apply light pressure on the center clip.

2



Slide the factory fuel door off the fuel door hinge.

3



Line up the billet fuel door's (4) alignment tabs. Slide the fuel door onto the hinge until it clips.

4



Slowly close fuel to ensure proper quarter panel clearance.