

## 5-Speed Shift Knob 1996-2004

41067  
24018  
41004  
41235  
102254  
102253  
41003  
41430  
41438  
41433  
41439



Remove the factory shift knob by rotating it counter clockwise.



Install the supplied nut. This nut is used to align the shift pattern on the shift knob. Thread the shift knob on until it is tight against the nut. If the shift pattern does not line-up simply adjust the nut up or down until it does. **\*\*Note:** Ensure the reverse lockout is still functional. If not, loosen the lock nut and knob until it does.

