



## Coil on Plug Kit

1. Remove the negative battery terminal from the battery and secure it out of the way, ensuring that it doesn't accidentally make contact with the negative terminal.
2. Remove any and all coil covers to access the coil packs.
3. Remove the bolts securing the coil pack.
4. Unplug the coil pack from the wiring harness.
5. Remove the original coil packs from the vehicle.
6. Reinstall the SR Performance Coil Packs in reverse order.