


INSTALLATION INSTRUCTIONS



2011-2013 FORD MUSTANG 5.0L | Part NO. 700028



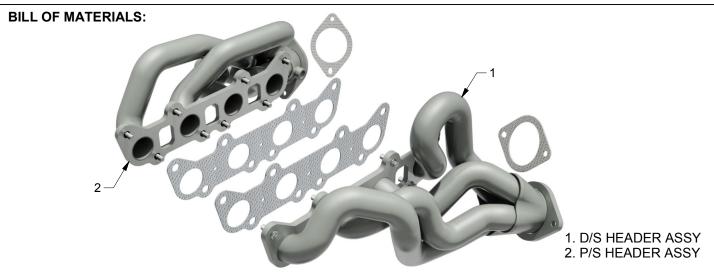



WEAR SAFETY GLASSES READ INSTRUCTIONS THOROUGHLY BEFORE INSTALLING PRODUCT

SHOP SUPPLIES:



SPRAY LUBRICANT

To ease removal of existing exhaust components (especially on older vehicles) spray penetrating lubricant on all fasteners and hangers/insulators that will be loosened or removed and let soak before disassembly.

HARDWARE KIT:

1. [16] HEADER BOLTS 2 [2] MANIFOLD GASKET



17mm Socket 15mm Socket 10mm Socket



7/8" Wrench



Pry Bar

MAGNAFLOW RECOMMENDS PROFESSIONAL INSTALLATION ON ALL THEIR PRODUCTS



WARNING: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

ATTENTION: Always install any supplied band or U-bolt clamps to the proper torque specifications of 40-45 ft-lbs for band clamps and 30-35 ft-lbs for U-bolt clamps. Over tightening will result in the clamp breaking and will NOT be warranted by MagnaFlow.

INSTALLATION INSTRUCTIONS




Step 1. Before removing the OEM manifold system, first disconnect the battery. Unbolt the air intake at the airbox inlet by loosening the retaining band clamp. This will allow you to rotate the engine for easier access.



Step 2. Disconnect the rear O2 sensor plugs.



Step 3. Loosen the clamps attaching the H-Pipe assembly and unbolt the H-Pipe flange from the catalytic converters.

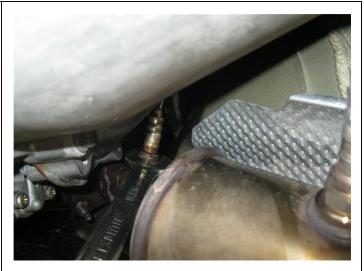

Step 4. Unbolt the O2 sensors in front of the catalytic converters. The H-Pipe assembly may now be removed.



Step 5. Unplug the O2 sensor coupling for the header. When disengaging the steering shaft first mark both the shaft and the universal joint to ensure alignment on reassembly. Remove the retaining bolt and uncouple the steering shaft.

INSTALLATION INSTRUCTIONS



Step 6. Before removing the motor mounts support the engine with a jack.



Step 7. The motor mounts may now be unbolted and removed.



Step 8. The header nuts are now accessible, remove all eight and remove the studs too. The drivers side header may now be removed.

Step 9: To install the new drivers side headers identify and lay out the two subassemblies to ensure correct orientations. Install the D/S header assembly. Use the supplied gasket and header bolts to secure to the manufaturers torque specifications. The engine may need to be raised with the jack for added clearance. Reinstall the motor mount and reconnect the steering shaft, be sure to align the marks you previously made.

Step 10: To remove the passengers side header assembly you will need to remove the starter motor. Unbolt using a 10mm socket and remove. Next, remove the motor mount using the same method as the drivers side. The remaining removal process is the same as the drivers side, disconnect the O2 sensors and remove the header.

Step 11: Installing the passengers side header assembly is essentially the same as the drivers side. Remove the header nuts and studs. Install the header assembly with the supplied gasket and attach using the supplied header bolts to the manufacturers torque specifications. Next, install the motor mount. Replace the starter motor. Check both sets of headers for clearance. Reconnect the OEM O2 sensors. Fasten each header assembly to the OEM catalytic converters and H-Pipe assembly using the existing hardware.

Step 12: With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust system and any body panels to prevent heat-related body damage or fire.) Install the air intake and reconnect the battery.

Step 13: Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear. The supplied band clamps must be VERY tight to properly align the pipes and prevent leaks. Inspect all fasteners after 25-50 miles of operation and retighten if necessary.