

JLT Oil Separator (05-10 GT)

Tools Required:

- *No Tools Required*


Included:


- 1 – JLT Oil Separator with hoses & plastic tangs




Installation Instructions:

1. Remove the stock PCV line by releasing the plastic tangs; carefully pull the hoses off of the fittings

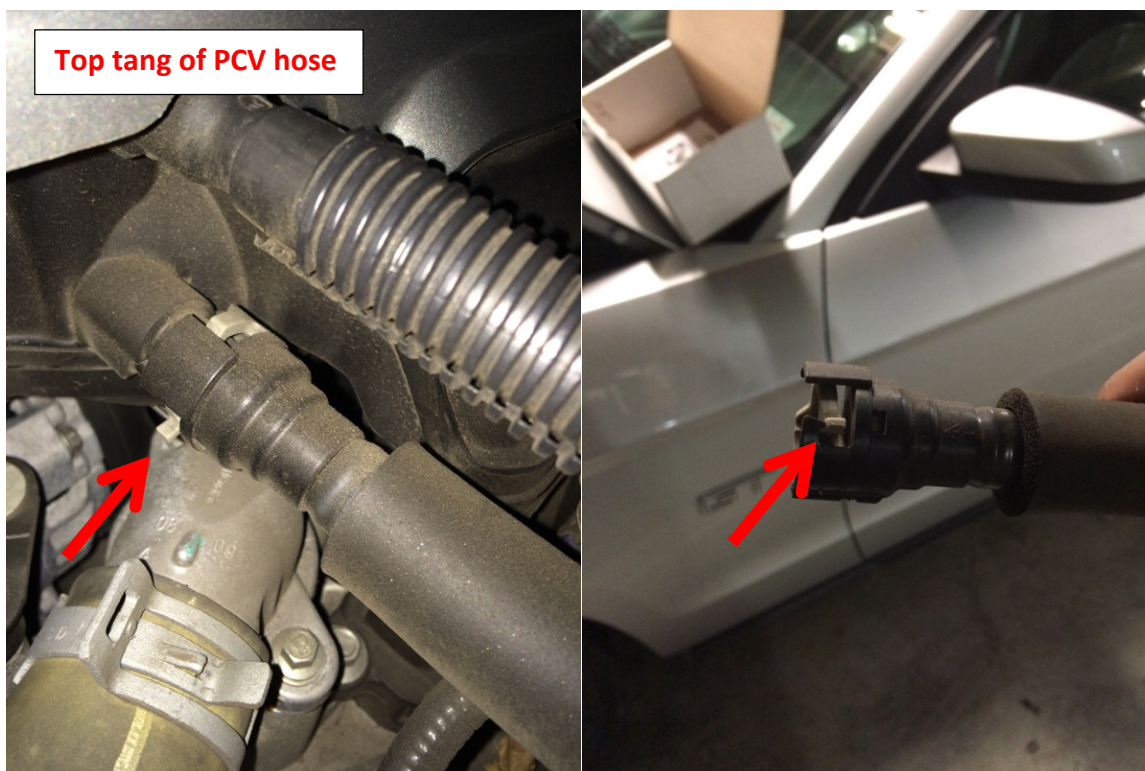

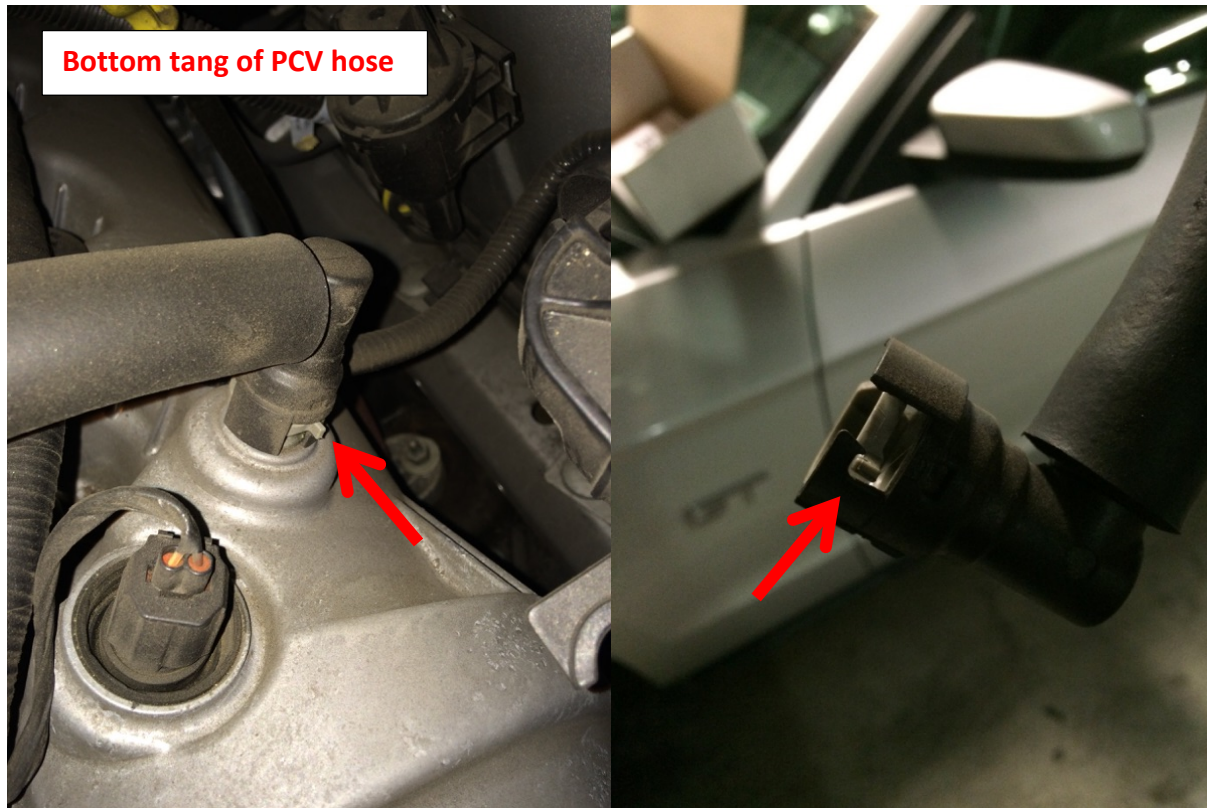

2. Install the JLT assembly connecting the straight end up top, and the angled end down on the bottom fitting over the valve cover. Assure both tangs are fastened securely in place

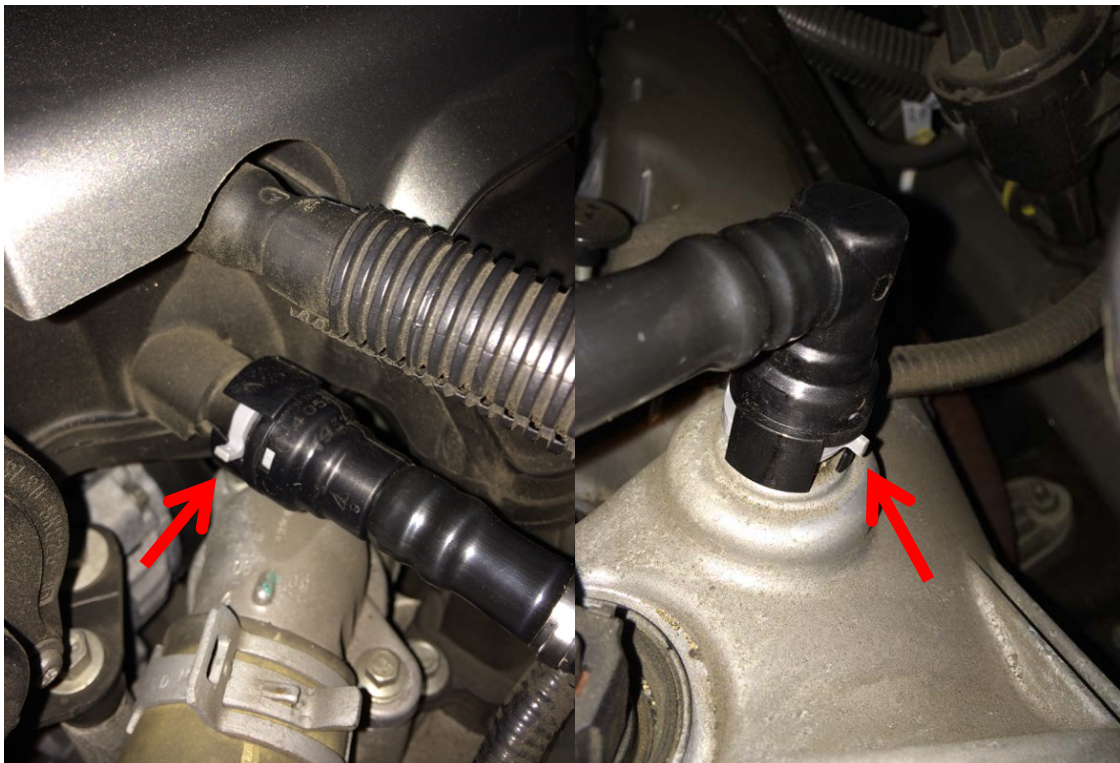

3. Start your Mustang and ensure the assembly is secured in place and there are no oil leaks through any of the connections



Installation Guide written by AmericanMuscle Customer Daniel Garcia 11.02.2014