



BULLITT STYLE FUEL DOOR

(2005-2009 MUSTANG ALL)


INSTALLATION INSTRUCTIONS

CONTENTS

(1) Fuel Door

TOOLS REQUIRED


7mm, 8mm Socket & Ratchet
Allen Head Bits

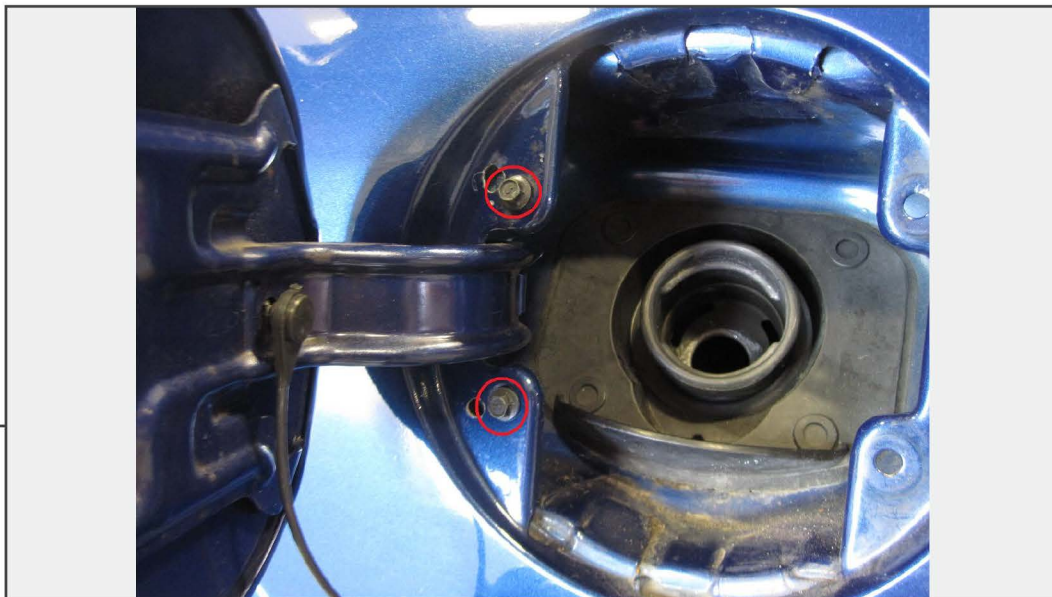STEP 1

Use the T20 Torx bit to remove the rubber bumpers and two screws securing the factory fuel door to the body. Remove the fuel door from the vehicle (you may have to remove the fuel cap to get it out).

STEP 2

Remove the two Allen head screws nearest the hinge on the new fuel door completely. Loosen the two Allen head screws securing the locating tabs on the opposite side, but do not remove them completely.

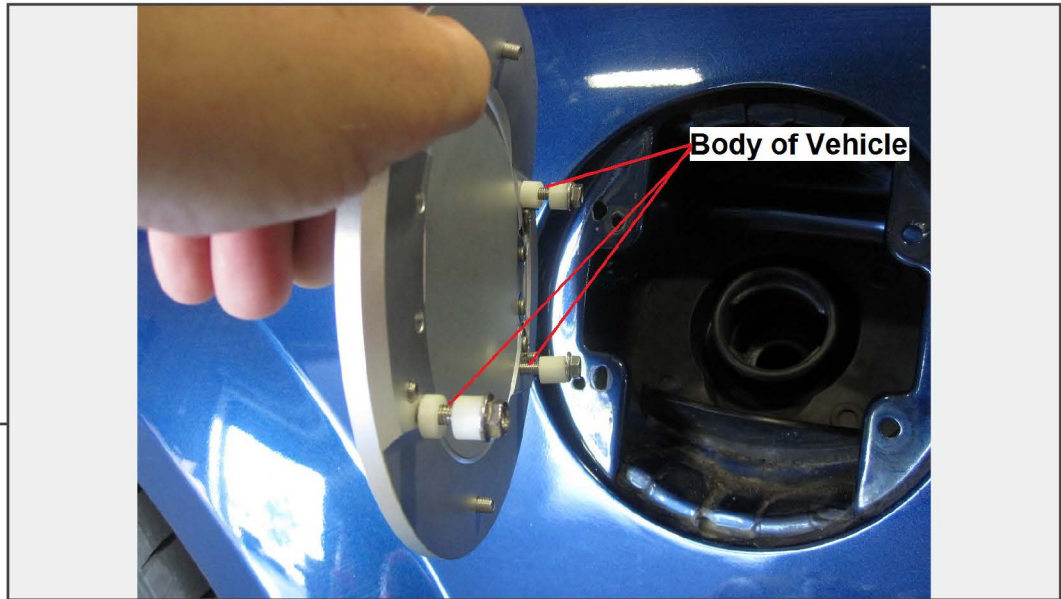

STEP 3

Above is a photo of how the bushings are to be installed in relation to the body of the vehicle. Place the remaining bushings and supplied 8mm nuts on the rear of the posts inside the body and tighten. This completed the installation of your Billet Fuel Door.