



CHIN SPOILER

(2005-2009 MUSTANG GT)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Chin Spoiler
- (2) Alcohol Pads

TOOLS REQUIRED

- Detailer/Soap
- Microfiber Towel
- Phillips Head Screw Driver



STEP 1

Begin by thoroughly cleaning the front bumper with automotive soap and water. Once dry, clean the area in front of the lower grille with one of the supplied alcohol pads. Next, turn the wheels to gain access and remove the (4) phillips head screws, (2) on each side, on the bottom of the inner fenders.




STEP 2

Remove about 2" of the tape backing and fold them as shown. The loose ends of the tape backing will need to be long enough that you can pull them once the chin spoiler is set on the bumper.



STEP 3

Starting on one side of the bumper, install one of the factory screws through the top hole of the chin spoiler. It may be helpful to have a helper support the opposite end of the chin spoiler to avoid damage.

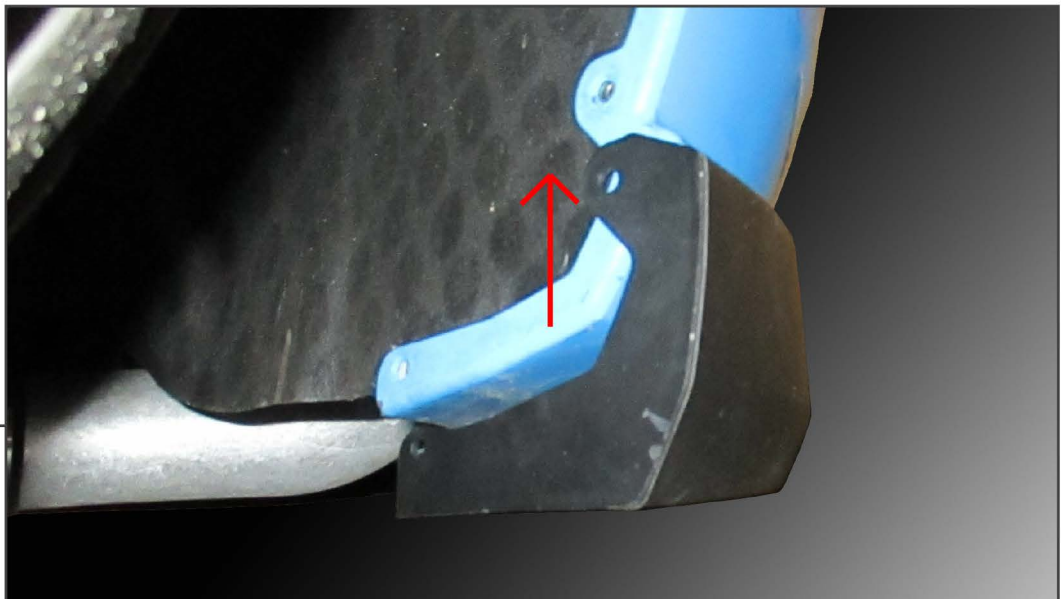

STEP 4

With the top screw loosely installed, move to the opposite side of the chin spoiler. Slide the end of the chin spoiler over the bottom of the bumper, making sure the center of the chin spoiler is located in the opening of the lower grille and not stuck under the bottom edge of the bumper. Loosely install the (4) screws removed in Step 1. CHIN SPOILER FITMENT IS TIGHT. DON'T PULL ON THE CHIN SPOILER AGGRESSIVELY, USE GRADUAL PRESSURE TO WORK CHIN SPOILER INTO PLACE.



STEP 5

With the hardware loosely installed, make sure the center section of the chin spoiler is sitting flush against the lower grille. Hold in place and remove the tape backing by pulling on the folded ends from Step 2. Press firmly on the tapped area to fully seat the adhesive. Once set, tighten the (4) screw on the spoiler ends to complete the installation.