



REAR DIFFUSER

(2013-2014 MUSTANG GT/V6)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Rear Diffuser
- (2) Tape Brackets
- (4) Plastic Push Rivets
- (2) Alcohol Pads
- (1) Adhesion Promoter

TOOLS REQUIRED

- Detailer/Soap
- Microfiber Towel



STEP 1

Thoroughly clean the rear section of the vehicle with automotive soap and water. Using the supplied alcohol pads, wipe down the areas circled above.



STEP 2

Tape brackets are side specific, please note the proper orientation above.



STEP 3

Clean the diffuser with a supplied alcohol pad where the tape brackets will adhere to the diffuser. Next, wipe those same areas with the supplied adhesion promoter and let dry. Adhere the tape bracket so only the thickness of the tape sticks above the top edge of the diffuser.



STEP 4


Before removing the tape backing and adhering the diffuser to the bumper, test fit the diffuser so you have a clear idea of how it sits. Once you're comfortable, remove the tape backing and adhere the diffuser starting in the center and working your way out towards the exhaust openings. Press firmly in all location to fully seat the adhesive.

STEP 5



Secure the lower diffuser tabs using the supplied plastic push rivets.

STEP 6

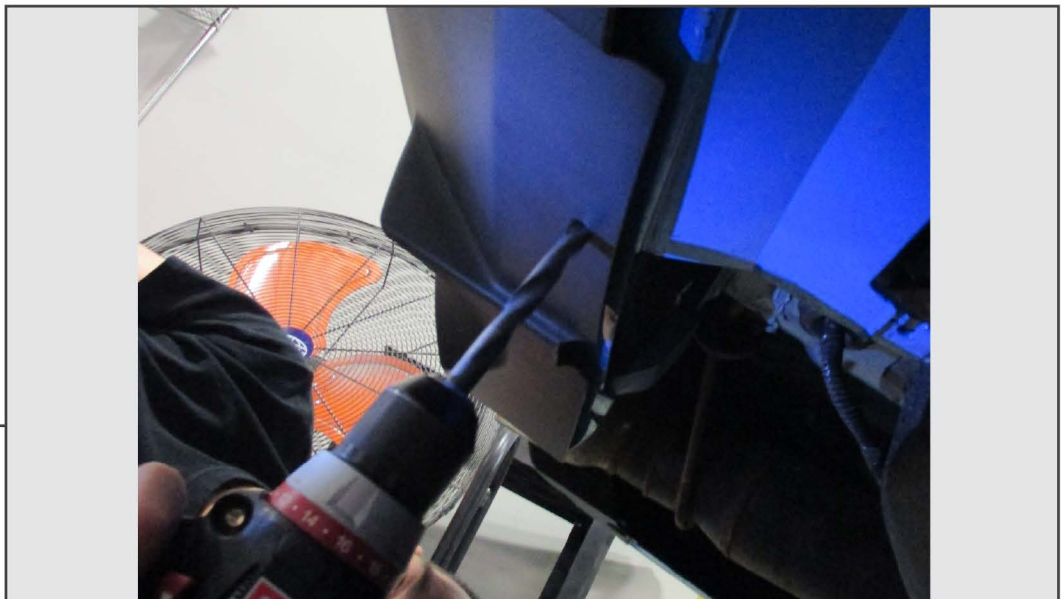

Using a 7/16th drill bit, drill out the hole locations on the bottom edge of the diffuser and install the supplied plastic push rivets to complete the installation.