



2015 SR Resonator Delete Kit

Contents:

- (1) Resonator Delete Pipe
- (2) Exhaust clamp kits



Tools Needed:

Jack
Jack Stands (4)
Sawzall or similar
Ratchet
Sockets (13mm, 15mm)
Wrench (13mm, 15mm)

Important Notes:

**Professional Installation is
Highly Suggested.**

Step 1:

Raise and support the car so you can access the factory resonator.



Step 2:

Line up the resonator delete with the factory resonator. Use the step down on the front of the pipe as your reference point .



Step 3:

Carefully cut the factory exhaust so that you don't hit the driveshaft or fuel tank with the blade. **Note: Always use safety glasses.




Step 4:

Wiggle the factory resonator out, and replace with resonator delete pipe.



Step 5:

Resecure the factory exhaust clamps onto the new resonator pipe.

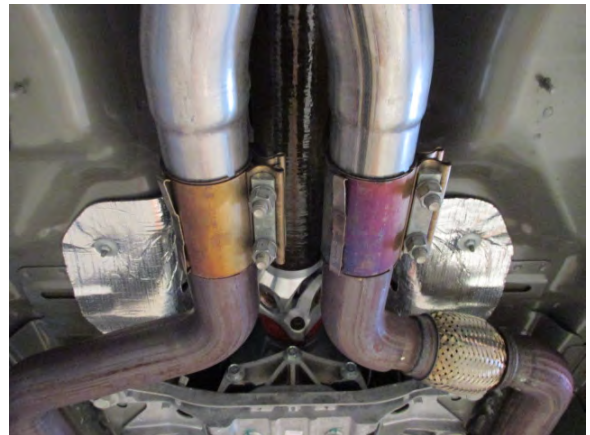

Step 6:

Use the supplied exhaust clamps to secure the resonator delete pipe onto factor exhaust.

