



---

# REAR WINDOW LOUVERS

(2015-2020 MUSTANG FASTBACK)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

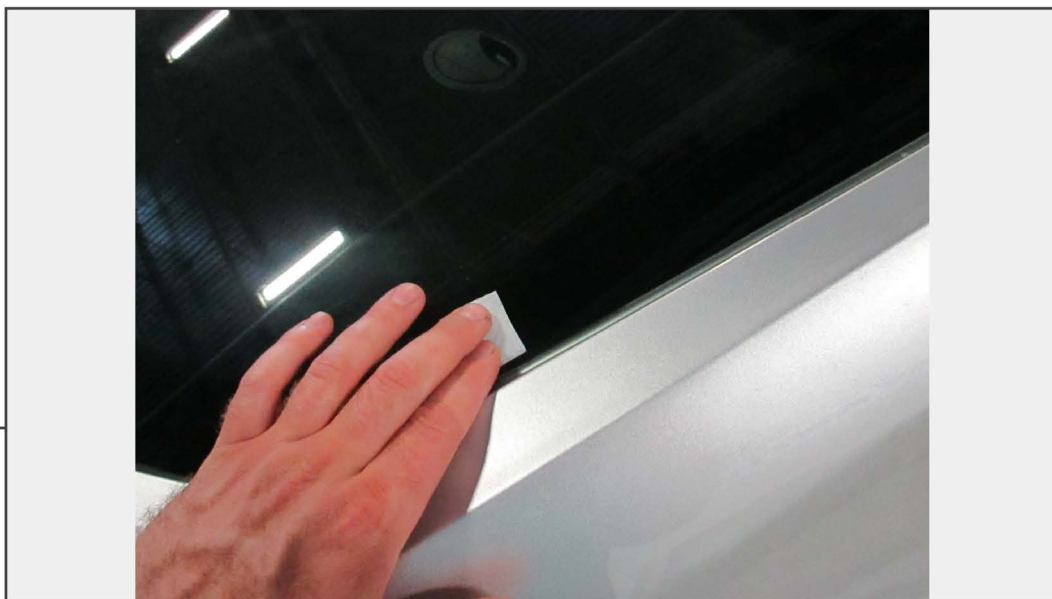
---

- (1) Rear Window Louver
- (9) Mounting Brackets
- (2) Alcohol Pads
- (2) Adhesion Promoter
- (1) Silicone Sealant

### TOOLS REQUIRED

---

- Glass Cleaner
- Microfiber Towel
- 8mm Socket or Wrench

**STEP 1**

Before beginning, make sure the rear window is cool to the touch and thoroughly clean the rear window glass. This will ensure the adhesive tape adheres to the glass properly. Using the supplied alcohol prep pads, wipe down the outer edge of the glass where the brackets will adhere. Once the alcohol has dried on the glass, repeat this process using the included adhesion promoter and let dry.

**STEP 2**

Lay the louvers upside down on a surface that will not scratch the finish. Install the 9 brackets as shown and install the nuts finger tight. You just want to tighten the brackets enough so they stay in place; there is no need to fully tighten them at this point.

**STEP 3**

Peel the backing from the adhesive tape on the brackets. With a helper, place the louvers over the rear window aligning the top edge of the louver with the top edge of the glass.

**STEP 4**

Once the louver is centered on the rear glass, press down firmly on all brackets to seat the adhesive tape. Remove the nuts from the brackets and carefully remove the louvers from the vehicle. Press down on all the brackets again to make sure they are fully adhered. Using the supplied Silicone Sealant, apply a thin bead around each bracket as shown to seal them to the glass. The sealant will start to harden in 20-30 minutes, but will not fully cure for 24 hours. Leave the brackets on the rear window glass for 24 hours and move on to Step 5 once the sealant has fully cured.

---

**STEP 5**



Once the sealant has cured, install the louver onto the brackets using the supplied washers and closed end nuts. Use an 8mm socket and  $\frac{1}{4}$  drive ratchet to install the nuts just past finger tight. **DO NOT OVER TIGHTEN THE NUTS AS YOU WILL RISK DAMAGING THE STUDS.**

**CLEANING:** To clean your rear window glass, simply remove the 8mm nuts/washers and remove the louver from the vehicle. Be sure to open your trunk when removing the louvers. Remember not to over tighten the nuts when re-installing the louver.