



ROOF SPOILER

(2015-2020 Mustang All)

INSTALLATION INSTRUCTIONS


CONTENTS

- (1) Roof Spoiler
- (2) Alcohol Pads
- (1) Adhesion Promoter

TOOLS REQUIRED

- Glass Cleaner
- Microfiber Towel

STEP 1

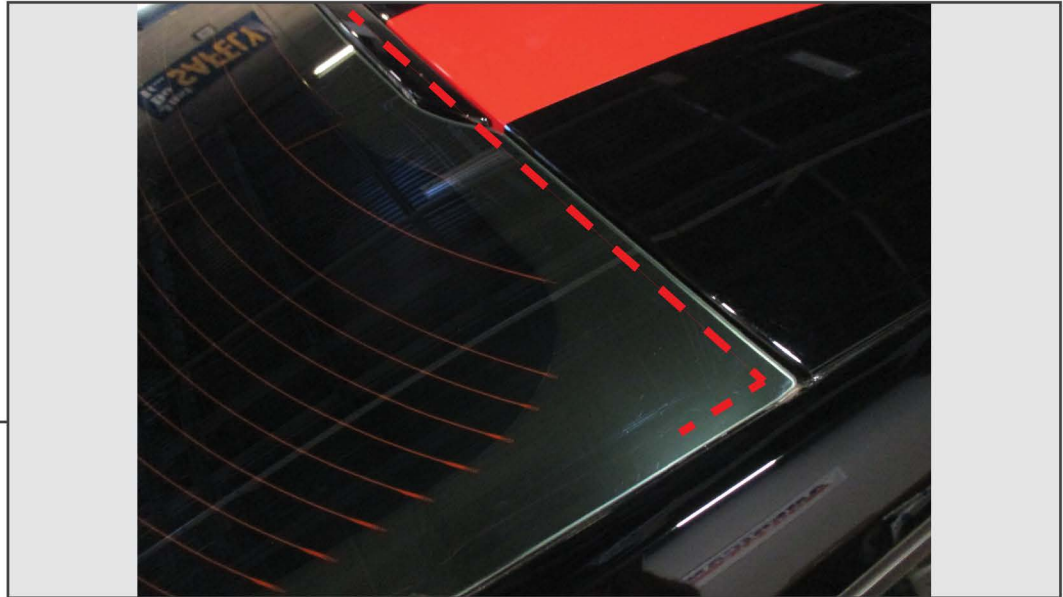

Begin by cleaning the rear window with glass cleaner. Next, wipe down the outer upper edge of the rear window with the supplied alcohol prep pads where the spoiler will adhere. Once dry, follow with the supplied adhesion promoter and let dry.

STEP 2



Peel the backing from the 3M tape. With help, position the spoiler over the rear window.



STEP 3

Line up the outside edge of the spoiler just inside the top and side edges of the glass. Once positioned, apply firm even pressure over the length of the spoiler to seat the adhesive.