



# FRONT CHIN SPLITTER

(2015-2017 MUSTANG GT, ECOBOOST, V6)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) Front Chin Splitter
- (6) Plastic Push Rivets

### TOOLS REQUIRED

---

- 1/4" Drill Bit & Drill
- Flat Head Screw Driver
- Wire Cutters



**STEP 1**


Raise and support the front of the vehicle. Center of the splitter with the center line of the bumper.



**STEP 2**


Line the mounting stanchions up with the edge of the chin spoiler.

**STEP 3**

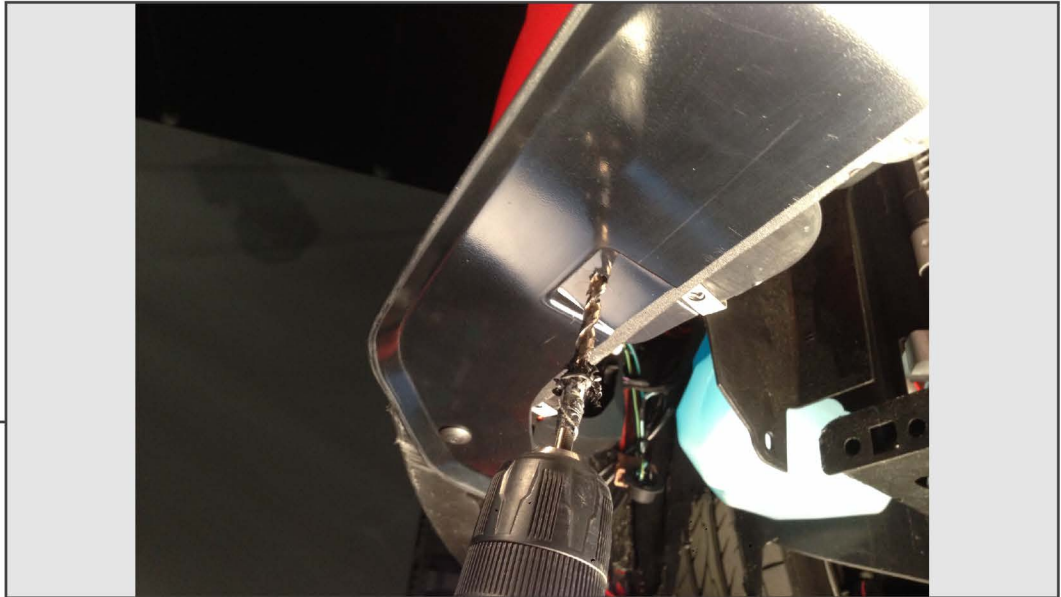


Have a helper hold the splitter while you drill the mounting holes in the chin spoiler. Be very careful when drilling so that you DO NOT drill through the top side of the chin spoiler. Firmly press the supplied 1/4" mounting push rivets. If you can not get the push rivet all the way in you may need to trim the splash shield. See Step 5 and 6.

**STEP 4**

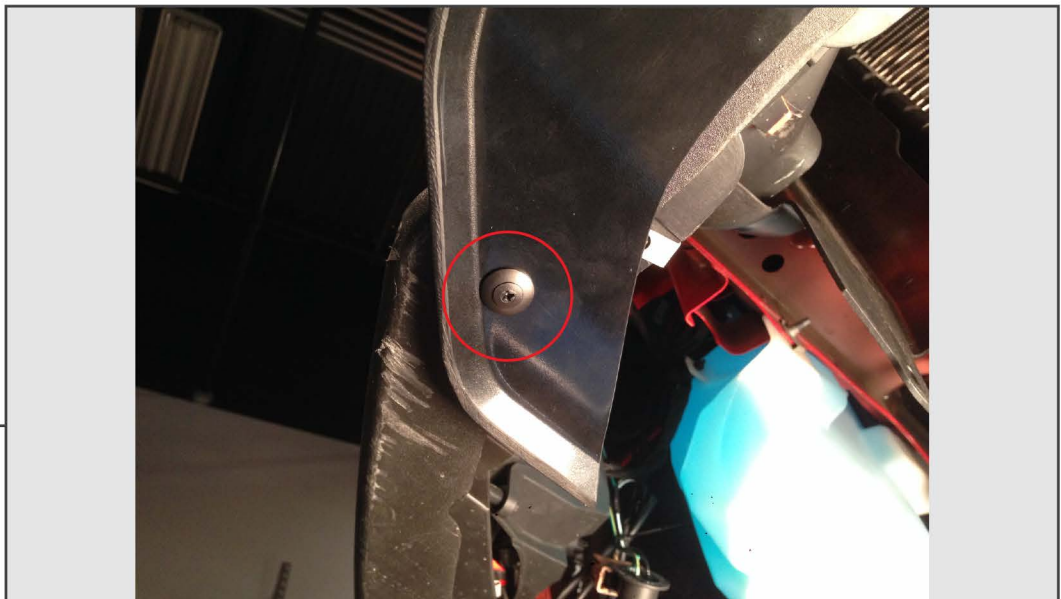

Optional: If you would like the ends of the splitter tighter to the bottom of the chin spoiler, you will need to drill (2) additional holes. Locate a portion on the splitter that makes good contact with the underside of the chin spoiler and drill a 1/4" hole through the splitter and the chin spoiler. Firmly press in the additional push rivets, as you did in Step 3.

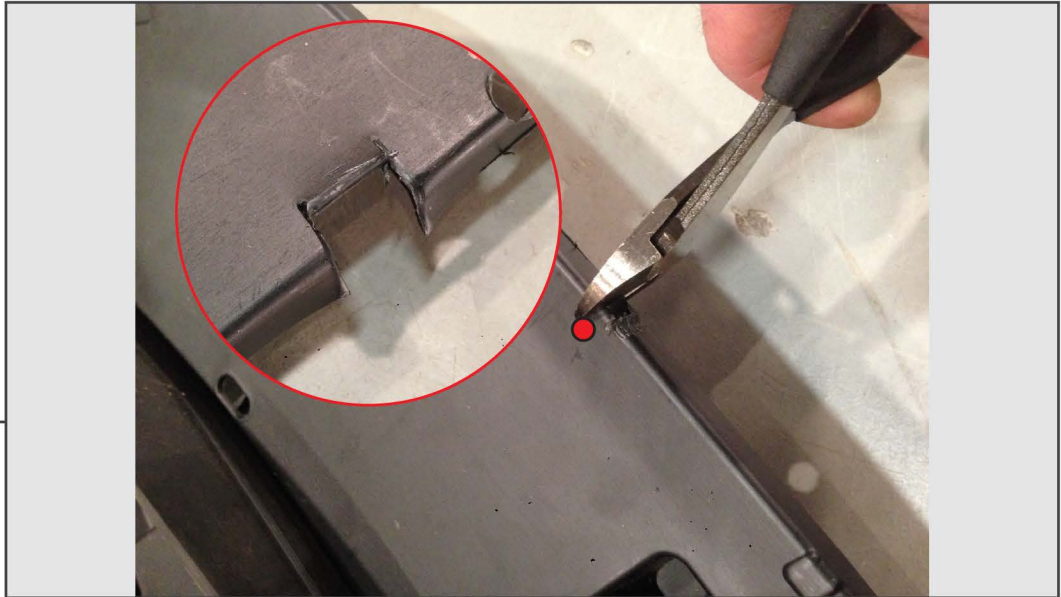

**STEP 5**

Some cars will require trimming of the splash shield in order for the push rivets to seat properly. After drilling the mounting holes through the factory chin spoiler, mark the holes on the splash shield. Remove the splash shield (Step 6) from the car and cut out any interfering material, as shown.



**STEP 6**

Removing the splash shield will require you to remove various clips, and 7mm screws.