



**STREET SCENE EQUIPMENT, INC.**

365 McCormick Avenue  
 Costa Mesa, Ca. 92626  
 Phone (714) 426-0590 Fax (714) 426-0591

950-70713  
 2013  
**FORD MUSTANG**  
**FRONT SPLITTER**  
**URETHANE**

**INSTALLATION INSTRUCTIONS**

**NOTE: Fit all parts before painting ( See special instructions for paint Prep. ) Parts that have been installed, prepped, or painted are not returnable.**

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Splitter	1	Instruction Sheet	1	Urethane Paint Prep Sheet
3 FT.	3/4 Double Side Tape	4	Big Self Tapping Screws	2	Turnbuckles
3 FT.	1/2 Double Sided Tape	8	Small Self Tapping Screws	2	Adhesive Promoter

TOOL LIST	
Sandpaper/Scotch Brite pads,Phillips Head Screw Driver	

1. On the back of the splitter there is an indentation. This is where you will apply the double sided tape. This surface has to be CLEAN and DRY for the tape to properly adhere. A residual-free cleaner is recommended (e.g. **Wurth Clean-Solve**) to prepare the surface. The surface of the vehicle should also be cleaned for proper adhesion. (See Fig.1) Next you will use the adhesion promoter provided where the tape will go on the splitter and on the vehicle . When applying the tape make sure the the tape is smooth and wrinkle free. It is best to use 3 or 4 different pieces on the long sections rather than 1 long piece. You only get one shot at putting the tape on when using the adhesion promoter. So make sure the tape is on correctly .



**FIGURE 1**

2. After applying the tape, pull back approx. 1 inch of the protective covering on the tape from each end. Make sure the film is sticking out. Make sure to prepare the surface where you will apply the splitter . Place the splitter GENTLY on the vehicle and make sure you have it positioned correctly. It is good to have someone help you with this. Since you are using adhesion promoter make sure it is on correctly and you will not get a second chance! While holding it in position, pull the tabs you created while applying light downward pressure (Fig.2) Continue this taking care not to tear off tabs by pulling too hard. After all the film is removed , apply firm pressure all around to insure the tape has bonded properly .



FIGURE 2

3. Next you will need to secure the end on the side of the splitter . Use the big self tapping screws and mount 2 on each end. It is recommended that you drill pilots holes in the locations you will be securing the splitter.
4. You will also need to secure the 2 nubs on the center of the splitter. These will have to go in at an angle to contour the front fascia. **(Fig.3 Arrow)**

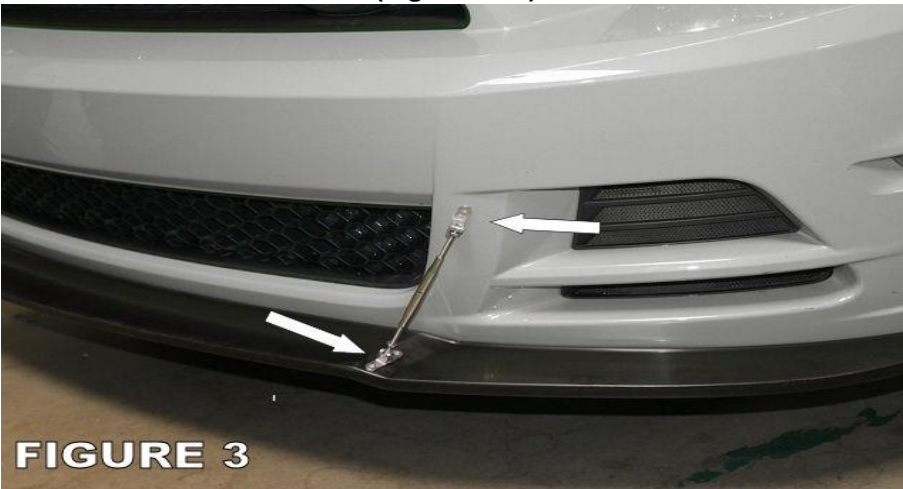


FIGURE 3

5. Last you will be installing the turnbuckles onto the front fascia and the top of the splitter. Use the provided small self tapping screws and mount as shown or any way you like. Now you are done. Enjoy you new look.