



HOOD VENT SCOOPS

(2015-2017 MUSTANG GT)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Hood Vent Scoop
- (1) RH Hood Vent Scoop
- (4) Clip Studs
- (2) Alcohol Pads

TOOLS REQUIRED


- 9mm Socket & Ratchet
- Trim Panel Removal Tool
- Flat Head Screw Driver

STEP 1




Remove the hood liner push pins and hold back the liner to gain access to the factory hood vent mounting nuts.

STEP 2

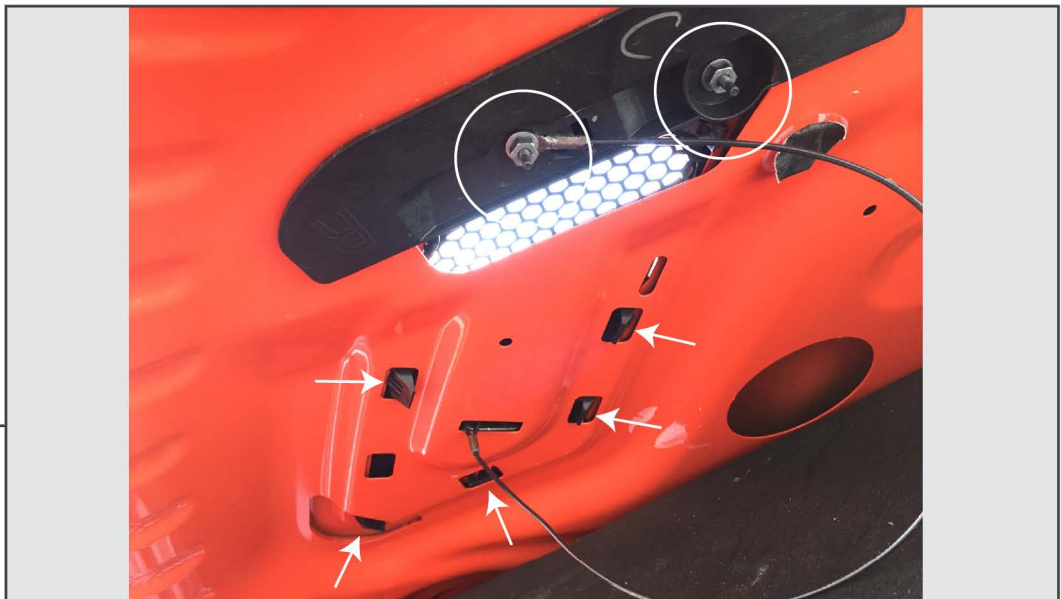

Remove the (2) 9mm nuts holding the factory vent in place. Then, using a small flat head screw driver, depress the vent clips on the underside to remove. It is important to hold the vent while releasing the clips to prevent the vent from popping out unexpectedly and scratching your hood.

STEP 3

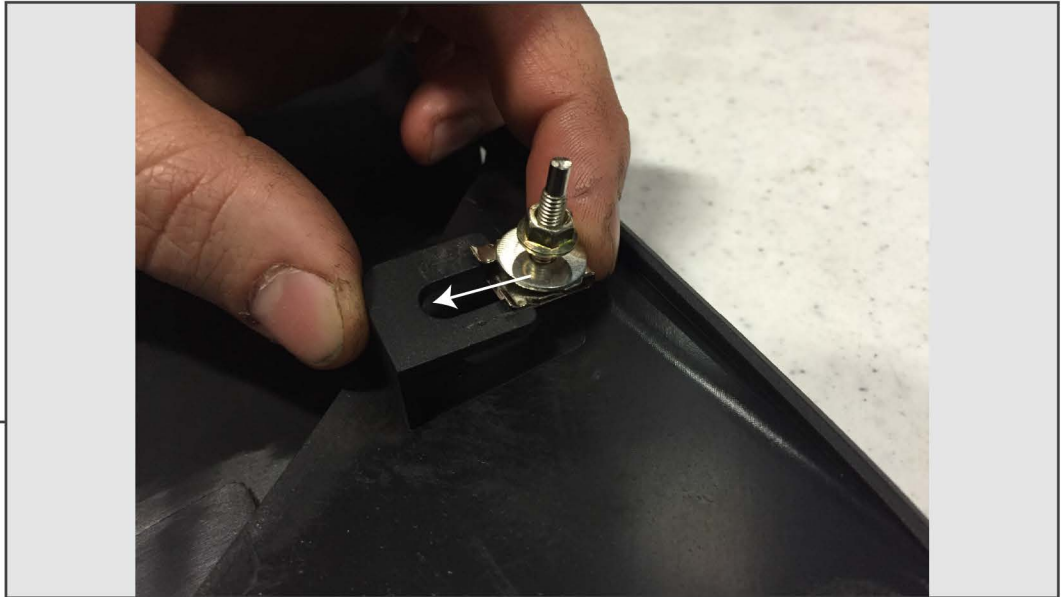

Install the supplied clip studs to the underside of the MMD Hood Vent Scoop.

STEP 4



Optional:

Tape off the hood vent (inside the dashed white lines above) and apply a black, removable paint, such as plasti-dip. This will prevent the body color to show through the vent opening. It is recommended that you apply 4-5 medium coats for ease of future removal.

STEP 5



Test fit the Hood Vent Scoop so you have a clear idea of how it should fit. Then, remove the 3M tape backing from the mounting lip.

STEP 6



Apply downward pressure on the rear of the Vent so that the lip slides under the edge of the hood, then secure with the supplied washers and nuts. Repeat these steps for the opposite side.