



## S550 SR Muffler Delete Kit

### Contents:

- (1) Muffler Delete (L&R)
- (2) Exhaust clamps



### Tools Needed:

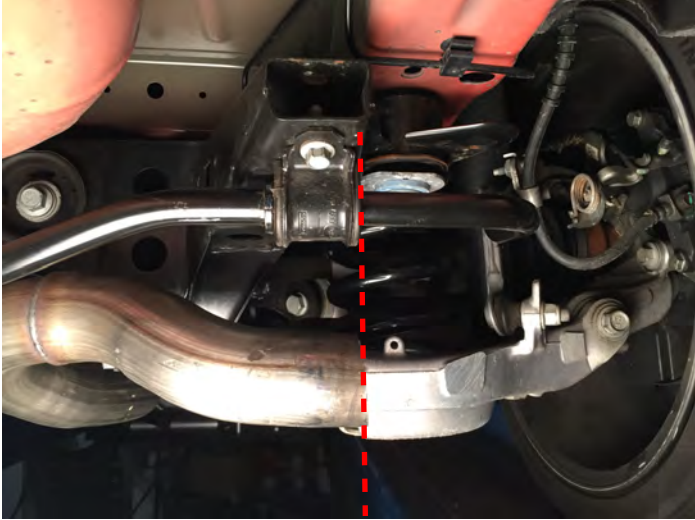
- Jack
- Jack Stands (4)
- Sawzall or similar
- Ratchet
- Sockets (13mm, 15mm)
- Wrench (13mm, 15mm)

### Important Notes:

**Professional Installation is Highly Suggested.**

**Step 1:**

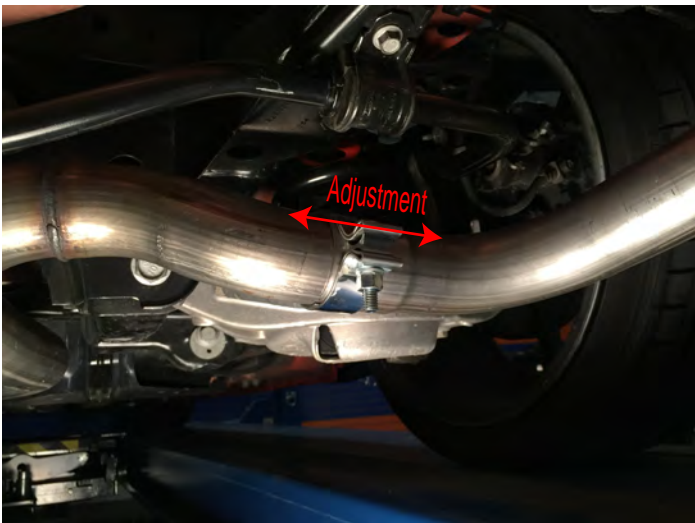
Raise and support the car so that you can access the mufflers. You will need to cut the mufflers at the sway bar bracket. Imagine a straight line from the outside of the sway bar bracket to the ground, cut along that line. Then remove the muffler bracket by removing the (2) 13mm bolts.

**Step 2:**

Assemble the muffler delete using the factory muffler bracket and the supplied exhaust clamp.

**Step 3:**

Install the muffler delete, slide the delete on to the exhaust. Do not tighten the clamp yet. See Step 5.

**Step 4:**

Mount the muffler bracket to the chassis using the factory hardware.

**Step 5:**

Center the tip in the bumper by sliding the muffler delete back and forth on the exhaust. \*\*Note: Additional trimming of the exhaust pipe may be necessary. Tighten the exhaust clamp once the tip is where you want it.