



CHIN SPOILER WINGLETS

(2015-2017 MUSTANG GT, ECOBOOST, V6)

INSTALLATION INSTRUCTIONS


CONTENTS

- (1) LH Chin Spoiler Winglet
- (1) RH Chin Spoiler Winglet
- (8) Plastic Push Rivets

TOOLS REQUIRED

- 1/4" Drill Bit & Drill

STEP 1

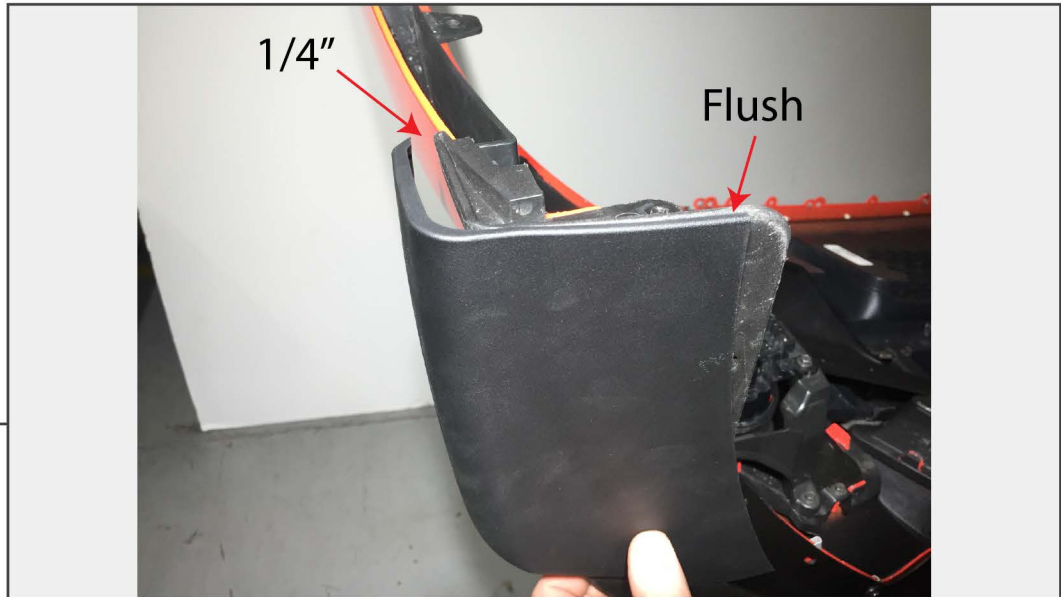

Raise and support the front of the vehicle to access the bottom of the chin spoiler. Locate the Winglet by placing it flush against the back edge of the chin spoiler and 1/4" off the bumper cover. 1/4" gap is recommended, but the winglet can be moved in or out as desired. Use a clamp to hold the winglet in place so you can step back and confirm its placement.

STEP 2



Carefully drill (4) 1/4" mounting holes. Please take caution when drilling, you only want to drill through the bottom surface of the chin spoiler. If you drill too far, you may drill through the top of the chin spoiler or bumper. Secure the winglet with the supplied push rivets. Repeat for opposite side.