

- Contents:**  
(1) Diffuser Center  
(1) Diffuser Left  
(1) Diffuser Right  
(4) Spacers

## Quad Exhaust Rear Diffuser - 2018 Style (2015-2017 Premium Bumper)


\*\*Designed to be used with after-market quad tip exhaust\*\*

### Step 1:

Jack the rear of the vehicle up and support with jack stands.

### Step 2:

Remove two fender clips to gain access to one of the (3) 7mm bolts holding the rear trim piece to the bumper. The rest are accessible from under the bumper.

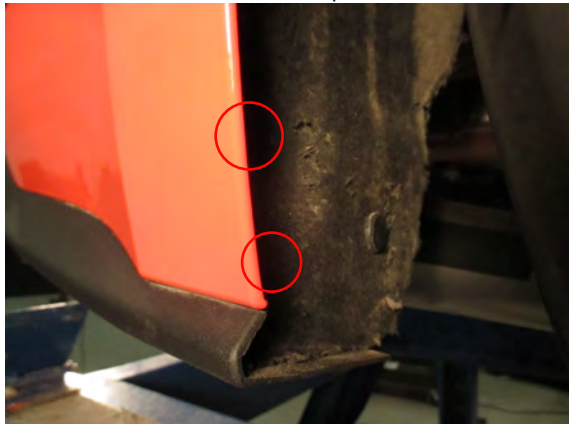


### Step 3:

Remove the (3) 7mm bolts holding the trim panel to the outer edge of the bumper. There is also a 7mm bolt below the reverse lights, and a push clip on the factory diffuser. All fasteners are the same on either side of the bumper.



### Step 4:

Applying light pressure, push the factory diffuser down for easier access to the upper reverse light bolts. Loosen the (4) 7mm bolts holding the reverse light to the bumper. Remove the plug from the light, then remove the light from the bumper.

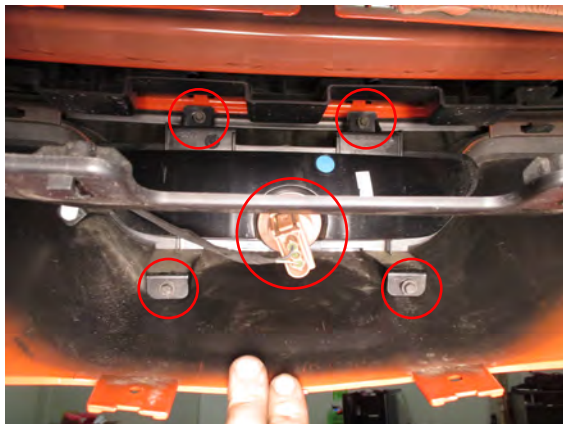


### Step 5:

Apply firm pressure to remove the factory trim tabs from the bumper.



### Step 6:

After the factory trim is removed, you will need to cut the factory diffuser free from the bumper. **\*\*NOTE:** Use the dotted lines below as reference.

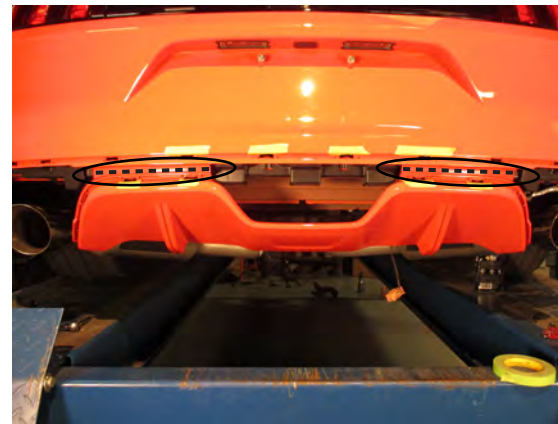

### Step 7:

Install the reverse light on the new diffuser using the provided spacers between the diffuser and the reverse light and the factory hardware. **\*\*Note:** Spacers must be used.



**Step 8:**

Install the left and right diffuser extensions. These simply clip on.



**Step 9:**

Transfer the screw clips from the factory diffuser trim panel to the new diffuser.



**Step 10:**

Transfer the reflectors from the factory bumper to the new bumper. They are held on with a 10mm nut.



**Step 11:**

Reinstall the diffuser to the bumper in the reverse order.

