





Step 1
Open the trunk and remove the various push pins securing the trunk lid panel to the trunk.

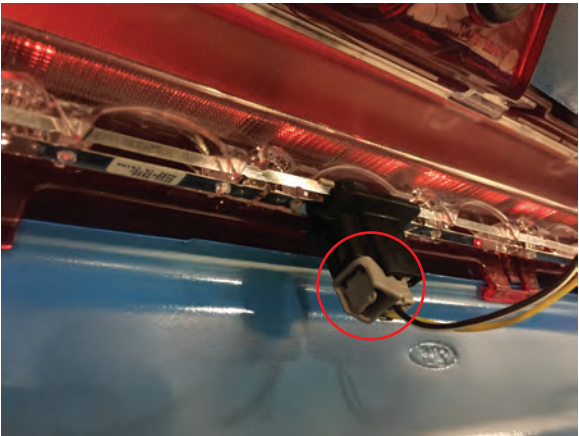

Step 2
Unplug the brake light wiring harness.

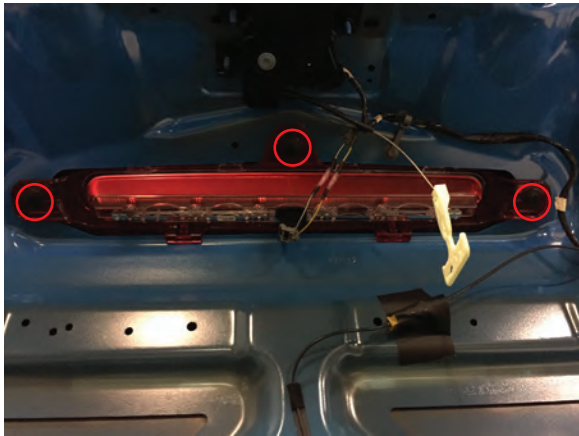

Step 3
Using a Phillips screw driver, remove the 3 plastic screw clips securing the factory brake light to the trunk. Then remove the brake light from the vehicle. Reinstall the Raxiom LED in reverse order.