

SPEEDIFORM

Installation Instructions for Carbon Fiber Fuse Box Cover (15-17 All)




Step 1:

Using soap and water, thoroughly clean the fuse box lid to remove any dirt. Allow the fuse box lid time to dry. ****Note:** Use a clean lint free cloth and isopropyl alcohol to wipe down the fuse box lid to remove any wax or grease to ensure the cleanest possible mounting surface.



Step 2:

Apply the supplied double sided tape to fuse box cover as shown above.

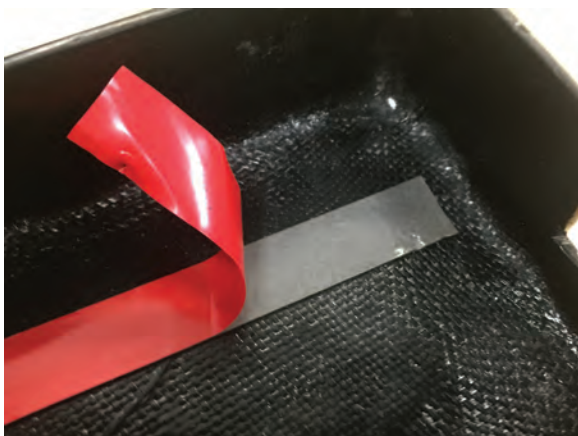

Step 3:

Before removing the tape backing, test fit the part on the vehicle to familiarize yourself with how it fits. Then remove the tape backing and install the part.



Step 4:

Apply firm even pressure to the tape surfaces to ensure proper adhesion.