


### Step 1:

Jack the vehicle up and support the front end with jack stands.

### Step 2:

Remove the 8 clips securing the plastic radiator cover to the rad support and remove it from the vehicle.

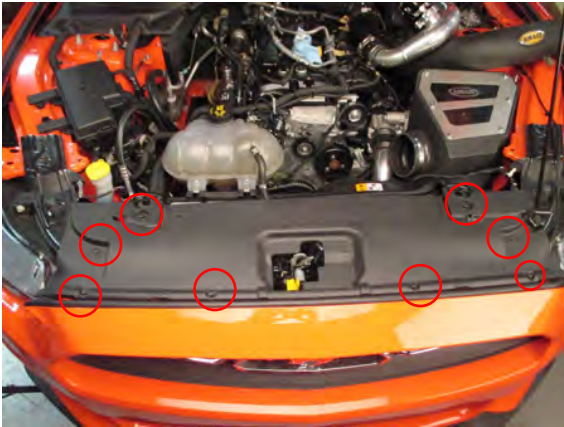


### Step 3:

Remove the 8 bolts securing the bumper cover to the radiator support.



### Step 4:

Support the front of the car so you can access the bumper splash shield. \*\*Note there are two versions of the splash shield. Both are attached in similar locations.

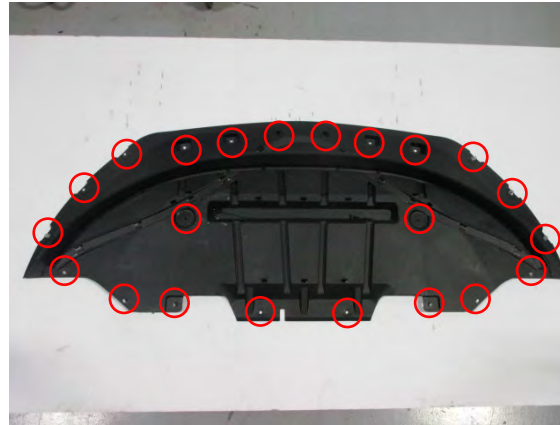

### Step 5:

On each side of the bumper, remove the (3) plastic clips holding the fender liner to the bumper.



### Step 6:

Fold back the fender liner so that you can access the one 7mm bolt that holds the bumper to the fender. \*\*Note: This bolt is tricky, it may help to remove the wheel for better access.



### Step 7:

With the splash shield pulled back, you can access the plugs for the running light, turn signals, and fog lights. Disconnect all the plugs before removing the bumper. \*\*Note: The running light harness is circled in green.



### Step 8:

Once the bumper cover is ready to remove, use firm pressure to pull the edge of the bumper cover from the fender clips. Have a helper support one side so that you don't scratch the paint. Slowly remove the bumper and support it on a soft non-abrasive surface.




### Step 10:

Next you will remove the factory grille by manipulating the tabs so that you can pull the grille away from the bumper cover. **\*\*Note this can be a little tricky take your time.**



### Step 9:

Begin by removing the plastic bumper brace. Gently bend tabs as needed to remove support.

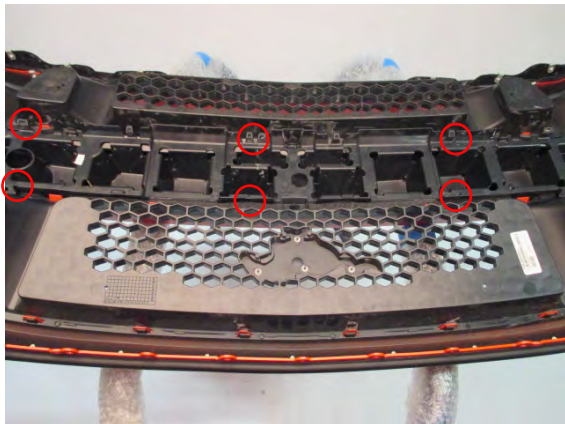

### Step 11:

Using firm pressure, clip the Shark Bite Grille into the bumper cover using the factory tabs. **\*\*Note: Ensure the grille "clicks" onto all the tabs.**



### Step 12 Optional Grille Light Wiring:

Run the grille wiring to the marker light wiring harness securing any extra wire out of the way. Splice the grille wiring into the factory marker light. (Reference Step 7)

Grille Wiring	-	Factory Wiring
Red	-	Purple
Black	-	Black

Test the key fob prior to reinstalling the bumper.

**\*\*Note: The red LED option is for off-road use only. Always make sure the lights are off before driving.**



### Step 13:

Reinstall the bumper in reverse order.

