

Contents:


- (1) Left Turn Signal
- (1) Right Turn Signal
- (2) Wiring Leads
- (6) Splice Connectors

Smoked LED Turn Signals (15-17)




Step 1

Remove the (8) clips securing the plastic radiator cover to the radiator support and remove it from the vehicle.

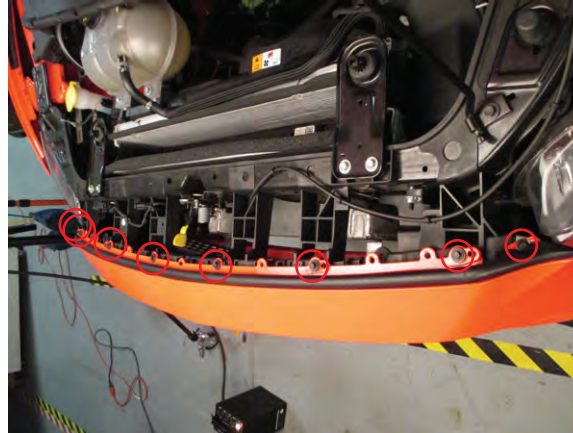

Step 2

Remove the (8) bolts securing the bumper cover to the radiator support.

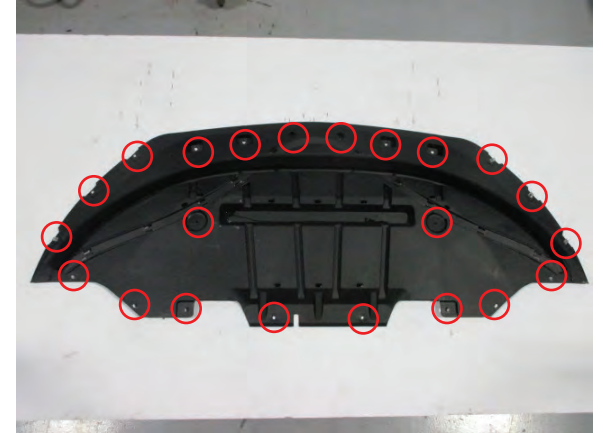

Step 3

Support the front of the car so you can access the bumper splash shield. **Note there are two versions of the splash shield. Both are attached to similar locations.




Step 4

On each side of the bumper, remove the plastic clips holding the fender liner to the bumper.




Step 5

Fold back the fender liner so that you can access the one bolt that holds the bumper to the fender. Once removed, firmly pull the sides of the bumper away from the fender.

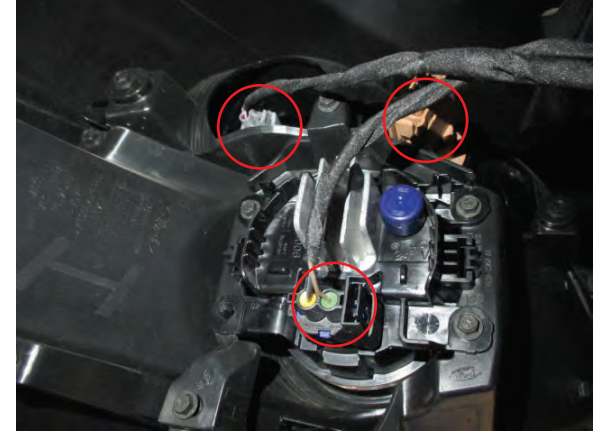


Step 6

With the splash shield pulled back, you can access the plugs for the turn signals and fog lights. Then remove bumper.

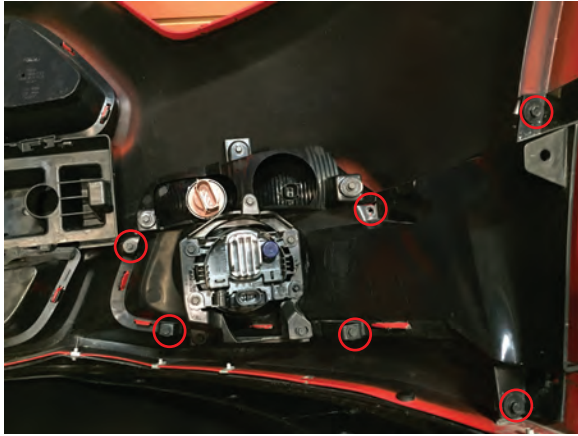

Step 7

Using a 7mm socket, remove the screws holding the turn signal bracket to the bumper. Use a flat head screwdriver to assist in releasing the clips.

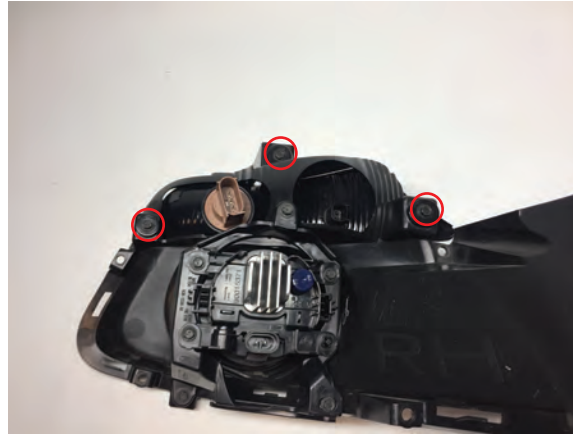


Step 8

Remove the (3) 7mm screws holding the turn signal to the bracket. Then remove the turn signal.



Step 9


Using the existing hardware, reinstall the Smoked LED Turn Signal. **Note: Be careful not to pinch any wires. Reinstall in reverse order.

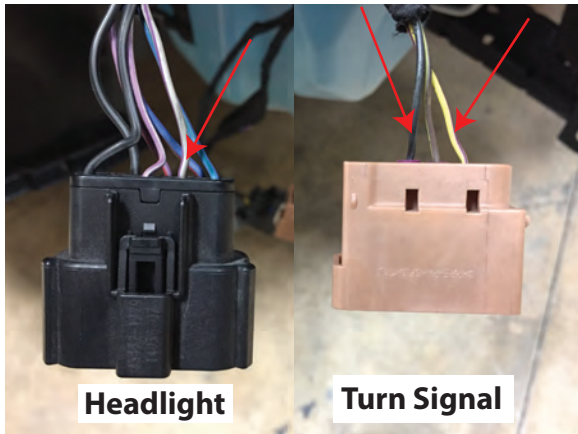

Step 10 Right/Passenger Side

Splice the LED wiring into the factory wiring as follows:

Headlight Harness	-	LED Harness
Gray/Purple	-	White
Turn Signal Harness	-	LED Harness
Black	-	Black
Yellow/Purple	-	Yellow

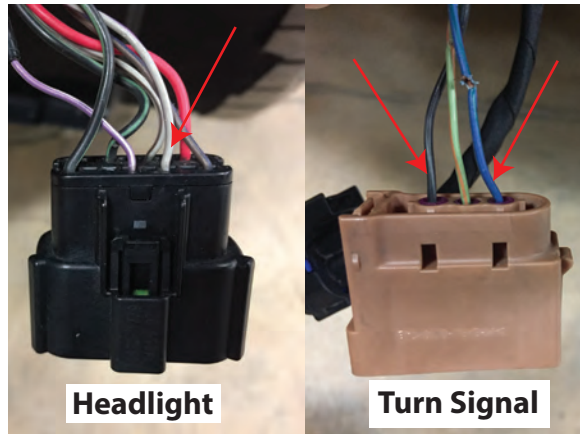

Step 11 Left/ Driver Side

Splice the LED wiring into the factory wiring as follows:

Headlight Harness	-	LED Harness
Gray/Purple	-	White
Turn Signal Harness	-	LED Harness
Black	-	Black
Blue	-	Yellow