



Smoked Third Brake Light 10-14 Mustang



Step 1
Open the trunk and remove the (13) push pins securing the trunk lid panel to the trunk.

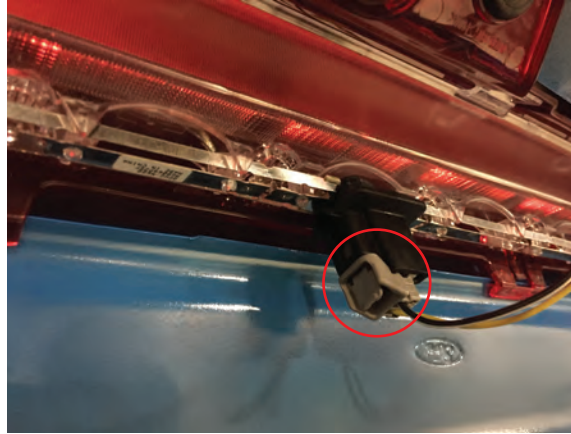

Step 2
Unplug the brake light wiring harness.

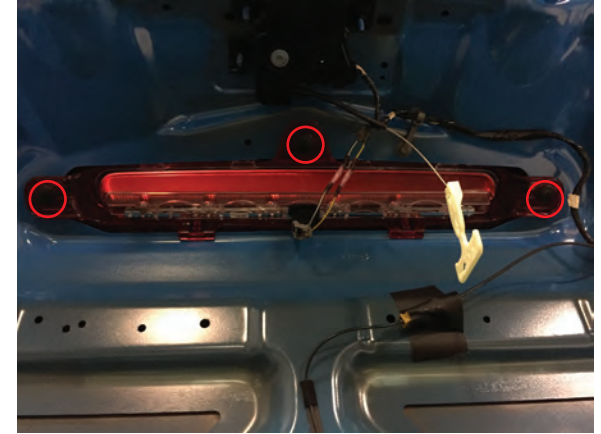

Step 3
Using a Phillips screw driver, remove the (3) plastic screw clips securing the factory brake light to the trunk. Then remove the brake light from the vehicle. Reinstall the Raxiom LED in reverse order.