



CHIN SPOILER

(2018+ MUSTANG GT, ECOBOOST, PERFORMANCE PACK)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Chin Spoiler


TOOLS REQUIRED

7mm Socket & Ratchet
Flat Head Screw Driver
Trim Removal Tool



STEP 1

Support the front of the car so you can access the bumper splash shield. Locate and remove the (3) push clips using a flat head screw driver or trim panel removal tool.

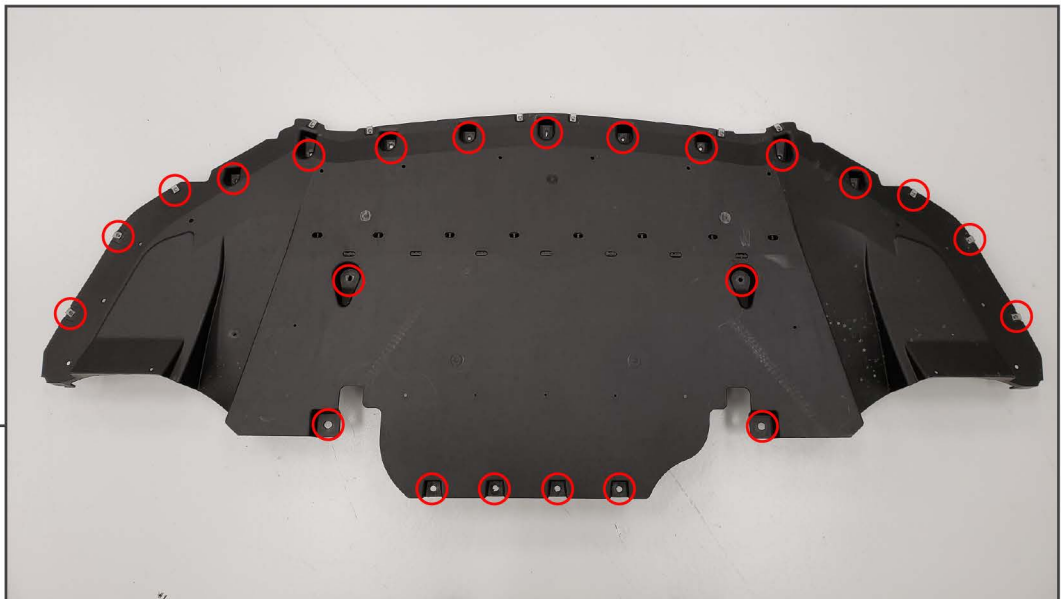

STEP 2

Using a 7mm socket and a flat head screw driver/trim panel removal tool, remove the splash shield.

NOTE: Non-Performance Pack models will require part# JR3Z-17626-B

STEP 3




Remove the (3) push clips, towards the wheel well, attaching the factory chin spoiler to the bumper on each side.

STEP 4



Remove the (10) 7mm fasteners holding the chin spoiler to the bumper.

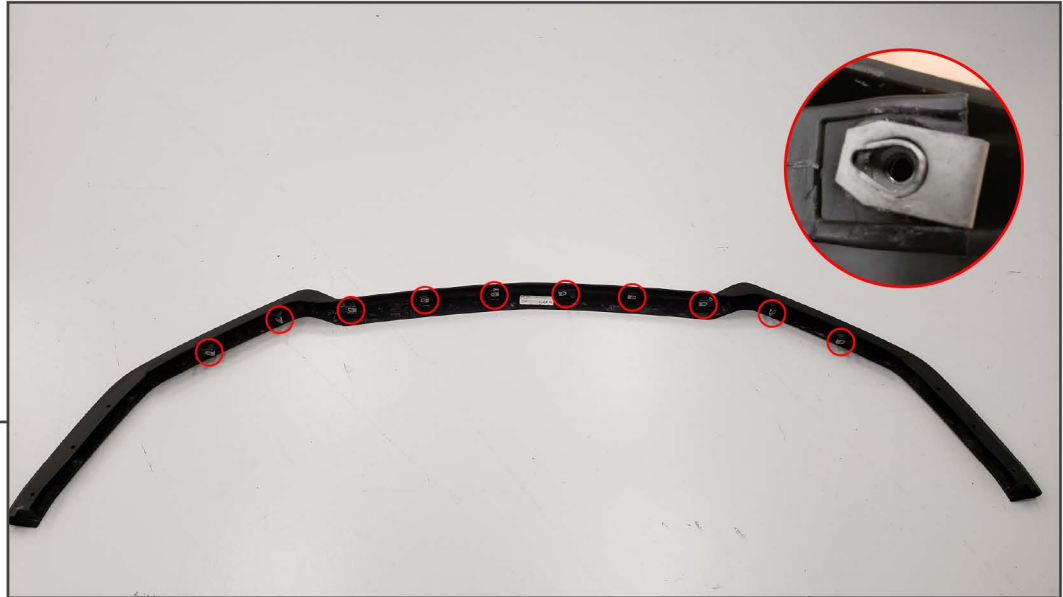

STEP 5

Remove the factory (10) metal speed clips, using a flat head screw driver, and transfer them to the new MMD chin spoiler.



STEP 6

Install the MMD chin spoiler using the factory hardware, then reinstall the factory splash shield.

NOTE: Some vehicles will have (8) extra speed clips installed in the OEM splash shield. On these vehicles, install the (8) supplied screws in these locations.