



---

# REAR SPOILER

(2015-2020 MUSTANG GT, ECOBOOST, V6)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) Rear Spoiler
- (4) Pedestals
- (8) Drill Templates
- (12) M6 x 1.0 Bolts
- (8) M6 Washers
- (2) Alcohol Pads

### TOOLS REQUIRED

---

- 10mm Socket & Ratchet
- Trim Panel Removal Tool
- 1/8" & 1/4" Drill bit & Drill
- Phillips Head Screw Driver
- Painters Tape




**STEP 1**



If equipped with a factory spoiler, remove the trunk lid trim panel. It is held on with (9) push rivets and (2) rubber bumpers. With the panel removed, loosen the (2) 10mm bolts securing the spoiler. Remove the rubber covers (circled in green) and remove the (2) 10mm bolts. The factory spoiler is also attached using tape, which will need to be carefully removed using adhesive remover and a trim panel tool. Do not pry against the trunk lid, it will dent/crease easily.


**STEP 2**

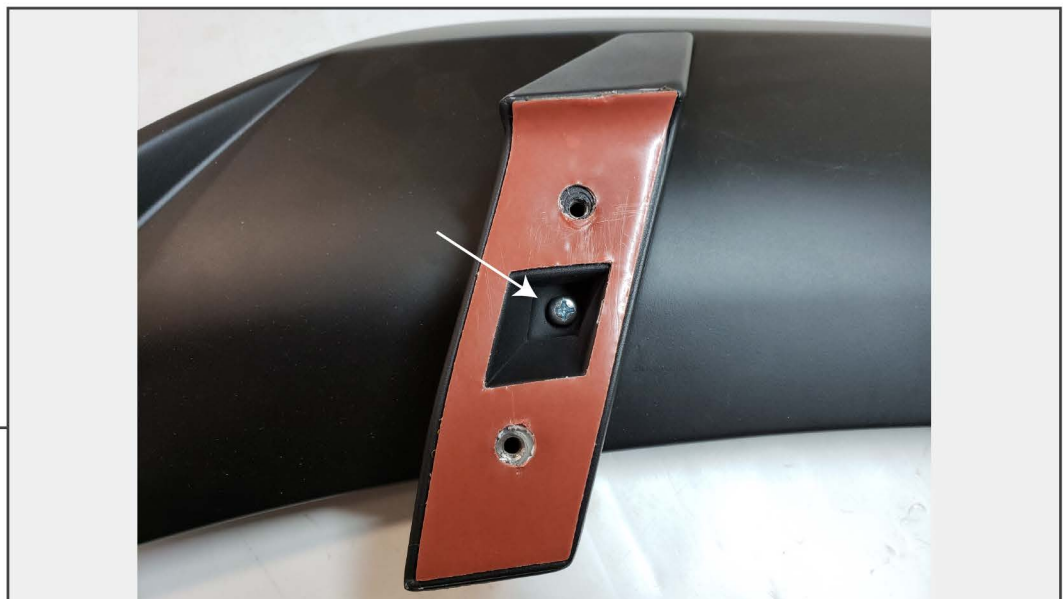

Using the supplied screws and a Phillips head screw driver, install the spoiler pedestals to the spoiler.



**STEP 3**

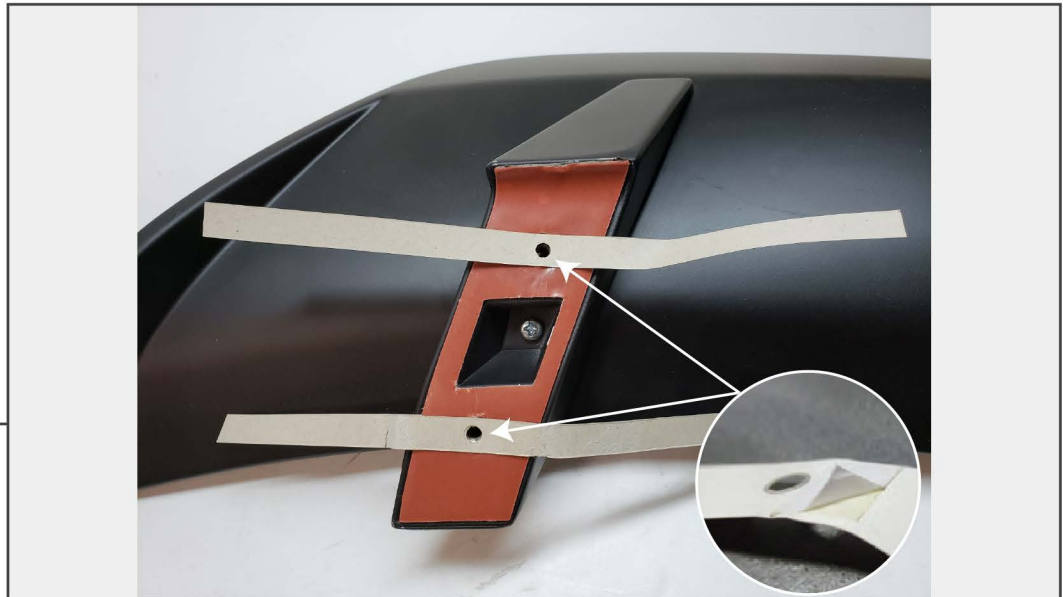

Remove the adhesive tab on the supplied drilling templates, and stick them on the rear spoiler. Carefully place the spoiler onto the decklid and position the spoiler to the back edge. Using masking tape, tape the drill templates to the decklid as they lay from the spoiler. Carefully remove spoiler leaving the drill templates attached to the decklid.

**STEP 4**



Carefully pre-drill the spoiler holes using a 1/8" drill bit. You will need to drill straight through the outer and inner decklid panels. Finish the holes to 1/4". \*\*Note: If your vehicle was equipped with a rear spoiler, you will not have to drill for (2) of the back outer holes.



**STEP 5**



Using the supplied alcohol pads, clean around the surface of the rear decklid that tape will be applied. Peel back the red lining of the tape, and carefully place on the decklid holding it in place. Test fit the spoiler to ensure all the holes line up prior to removing the red tape lining.

**STEP 6**



Secure the spoiler to the decklid using the supplied washers and nuts.