

# MP CONCEPTS

## Step 1:

Jack the vehicle up and support the front end with jack stands.

## Step 2:

Using a trim panel removal tool, remove the (8) plastic clips securing the plastic radiator cover to the support and remove it from the vehicle.




## Step 3:

Remove the (6) 8mm bolts, and (2) 6mm screws securing the bumper cover



## Step 4:

Support the front of the car so you can access the bumper splash shield. \*\*Note there are two versions of the splash shield. Both are attached in similar locations

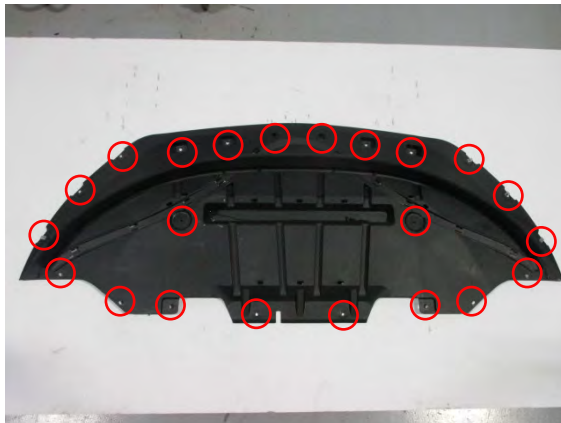

## Step 5:

On each side of the bumper, remove the plastic clips holding the fender liner to the bumper.



## 18+ Upper Grille

**Contents:**  
(1) Upper Grille

**Tools Required:**  
Jack & Jack Stands  
7mm, 8mm, 10mm Sockets  
Ratchet  
Trim Panel Removal Tool  
Flat Head Screw Driver

## Step 6:

From the top between the fender, locate and remove the (2) 10mm nuts. \*\*Note: Using an extension and swivel may be necessary.



## Step 7:

With the splash shield removed, you can access the plugs for the turn signals and fog lights. Unplug all (3) plugs.



**Step 8:**

Once the bumper cover is ready to remove, using firm pressure pull the edge of the bumper down to pop it from the clip. Have a helper support one side so that you don't scratch the paint. Slowly remove the bumper and support it on a soft non-abrasive surface.



**Step 9:**

Begin by removing the plastic bumper brace. Gently bend tabs as needed to remove support.



**Step 10:**

Next you will remove the factory grille by manipulating the tabs with a trim panel removal tool so that you can pull the grille away from the bumper cover. \*\*Note this can be a little tricky take your time.



**Step 11:**

Install the MP Concepts grille making sure all clips are properly aligned. Once all clips are aligned use firm pressure to snap the grille into place. Reinstall the front bumper in reverse order.

