



2018+ Rear Diffuser Fins

TOOLS REQUIRED: Towel / Cloth
Cleaner
Drill & 1/4" Drill Bit

CONTENTS: 2 - Fins
4 - Push Clips
1 - Tape Kit

2- Alcohol Wipes
2- Adhesion Promoter




1

Using the supplied alcohol wipes, clean the rear diffuser fins and allow time to dry. Then use the promoter, and allow time to dry. ****Note:** A clean surface is key to proper adhesion.



2

Test fit the fins prior to peeling the tape backing. Once proper fit is achieved, remove the tape backing from the taped areas.

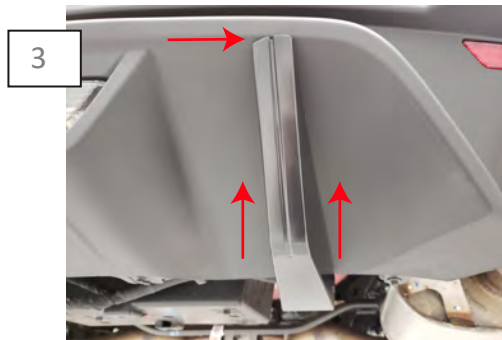


3

Install the diffuser fins by applying firm pressure on the fins and the factory rear diffuser. ****Note,** begin at the front face of the fin first.



4

Using a drill and a 1/4" drill bit, drill (2) holes on each diffuser fin. ****Note:** Be careful not to apply a lot of pressure drilling upward.

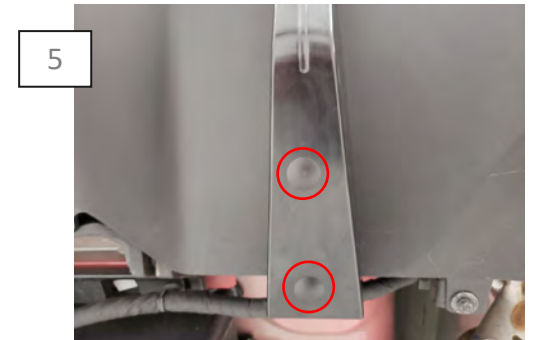

5

Once the holes are drilled, secure the fins fully using the supplied push clips.