

2018+ Side Scoops

TOOLS REQUIRED: Towel / Cloth
Cleaner
Tape Measure & Painter's Tape


CONTENTS: 2 - Side Scoops
4 - Inserts
2 - Adhesion Promoter
1 - Tape Kit

1




Wipe the tape edges on the scoop with the supplied alcohol wipes, allow time to dry. Then use the promoter, allow time to dry.

2

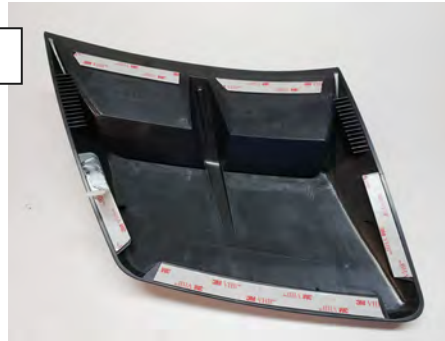

Apply the supplied tape as shown above.

3

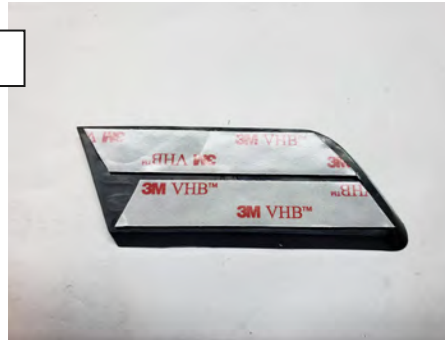


Apply the supplied tape to the (4) Inserts. The inserts will be labeled L-U for Left Upper, L-L for Left Lower, R-U for Right Upper, and R-L for Right Lower.

4




Install the inserts to the scoop by removing the tape backing and applying the inserts upward first then the bottom. Apply firm pressure to the inserts making sure the inserts adhere to the scoop.

5

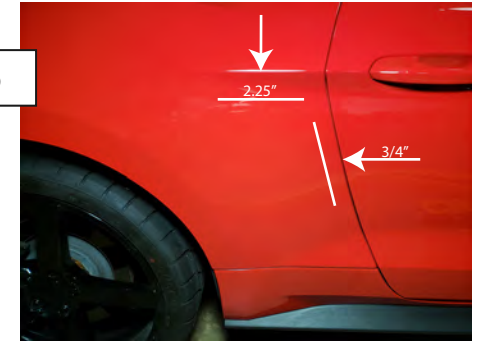

Fit the part before removing the tape backing. Measure roughly 2.25" inches from the body line down and roughly 3/4" inch from the door jam. Mark with painters tape.

6

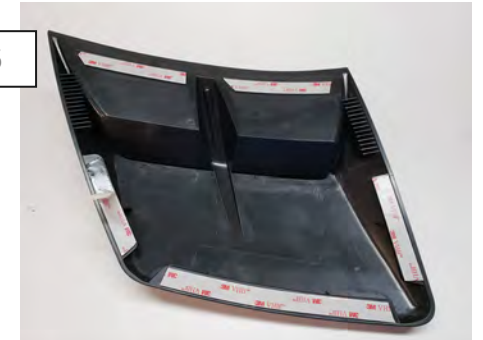

Once desired location is met, remove the tape backing from the scoop.

7



Apply firm pressure to the scoop over all the tape surfaces. Installation is now complete.