



## 2018+ Bumper Vents

**TOOLS REQUIRED:** Jack & Jack Stands      5.5mm, 7mm, 8mm, 10mm Sockets  
Trim Panel Removal Tool      Ratchet & Extensions

### Step 1:

Jack the vehicle up and support the front end with jack stands.

### Step 2:

Using a trim panel removal tool, remove the (8) plastic clips securing the plastic radiator cover to the support and remove it from the vehicle.



### Step 3:

Remove the (6) 8mm and (2) 5.5mm bolts securing the bumper cover to the radiator support.




### Step 4:

From the top between the fender, locate and remove the (2) 10mm nuts.



### Step 5:

Support the front of the car so you can access the splash shield. Locate, and remove the 7mm screws and push clips. \*\*Note there are two versions of the splash shield.

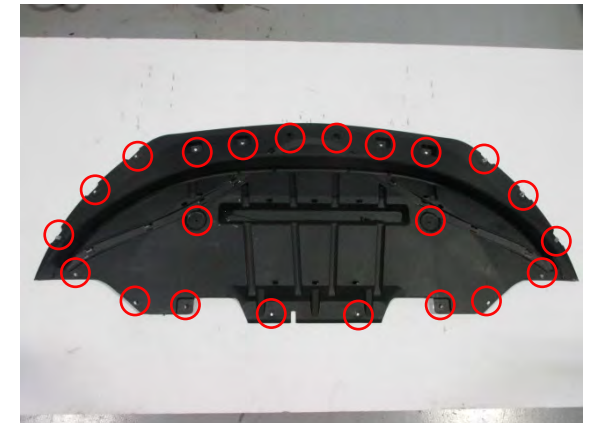

**Step 6:**

With the splash shield removed, you can access and remove the back plug for the turn signals and fog lights.



**Step 7:**

On each side of the bumper, remove the plastic push clips holding the fender liner to the bumper.




**Step 8:**

Once the bumper cover is ready to remove, using a socket extension push down on the plastic clip while pulling the side of the bumper cover away from the bumper. Have a helper support one side so that you don't scratch the paint. Slowly remove the bumper and support it on a soft non-abrasive surface.




**Step 9:**

Locate the (3) 7mm screws on each turn signal housing and remove. Gently remove the light fixture from the bumper.

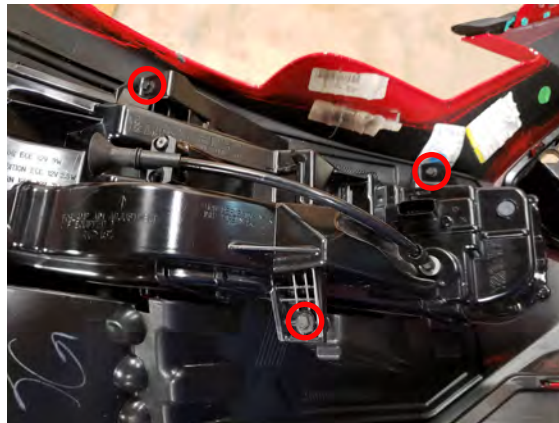

**Step 10:**

Using a cutting tool, neatly cut the inner corner piece off. This will allow easier access to removing and installing the bumper vents.

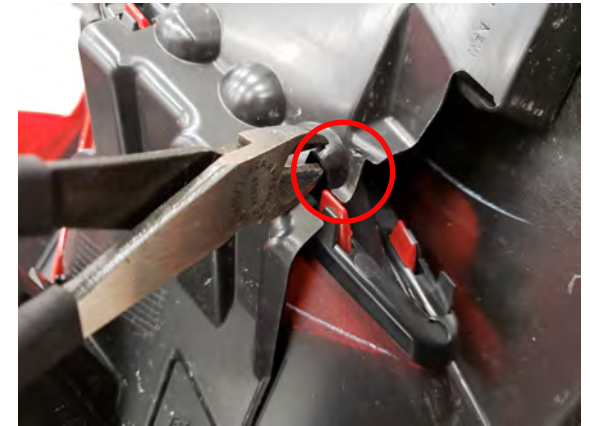

**Step 11:**

Using a flat head screw driver or trim panel removal tool, carefully pry the tabs to release the bumper vent. \*\*Note this can be a little tricky take your time.



**Step 12:**

Once all the tabs are release, carefully pull up on the bumper vent and compress the bumper together allowing more room for the bumper vent to be removed. Take your time, this is tricky.




**Step 13:**

Install the new bumper vents the same way the factory vents were removed.



**Step 14:**

Using the supplied alcohol wipes, wipe tape surfaces clean and allow time to dry. Next, use the promoter and allow time to dry. Once the promoter dries, apply the tape as shown below.

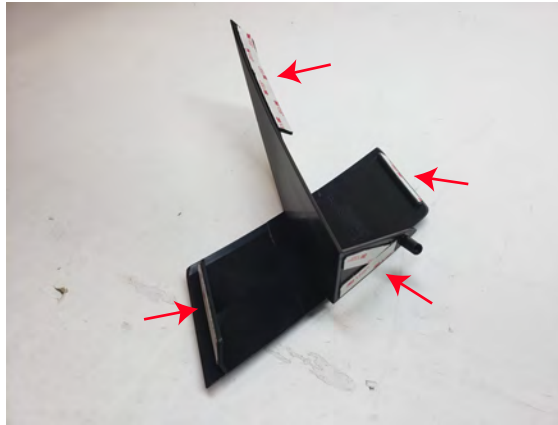

**Step 15:**

Same as the previous step, wipe the areas using the alcohol wipes and promoter pads where tape will be applied. \*\*Note, a clean surface will allow better adhesion.




**Step 16:**

Test fit the bumper splitter for proper fitment. Once proper fitment is determined, peel all tape backing with the exception of the front splitter section. Peel only the first inch of the front splitter section and fold over the edge of the part.



**Step 17:**

Insert the bumper splitter into place, and apply an even firm pressure over taped surfaces. Once fully in place, pull on the tape backing corner, and remove fully.

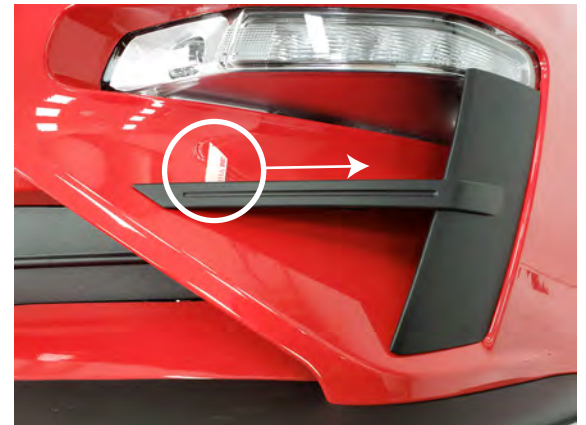

**Step 18:**

Using a 7mm socket and ratchet, install the 16mm screw to secure the splitter to the bumper vent. \*\*Note, do not over tighten this screw, damage may occur.

**Step 19:**

Reinstall the bumper in reverse order. Installation is now complete.