

Installation Instructions for 50th Anniversary Style Stainless Steel Window Trim (15-17All)

Contents:


- (1) Window Trim Set Labeled 1-6
- (2) Trim Cleaner
- (2) Adhesion Promoter

Step 1:

Thoroughly clean the left and right side window trim using the provided cleaner.


Step 2:

Familiarize yourself with how the window trim fits around the rear quarter window.

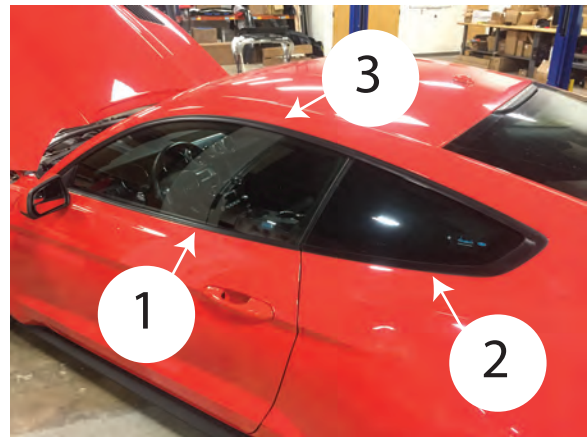

Step 3:

Note the trim locations.
Left side trim 1-3.
Right side trim 4-6

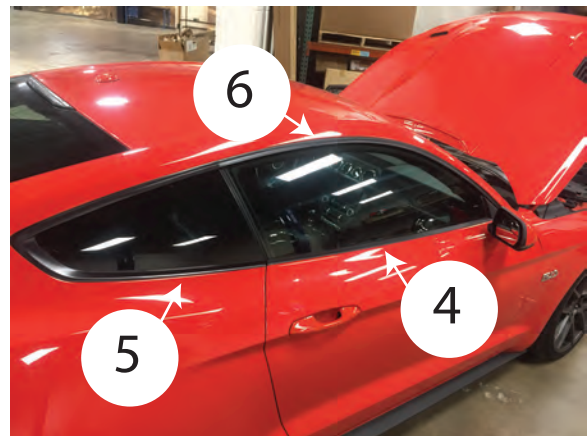

Step 4:

Remove the tape backing and apply the adhesion promoter to the exposed tape adhesive. Allow the adhesion promoter to flash dry before installing the trim on the vehicle.

