

# GT350R Style Carbon Fiber Spoiler (2015-2019)

**\*\*Installation Note:** Spoiler should be installed when the ambient air temperature is between 70-90 degrees Fahrenheit\*\*

## Contents:

- (1) Upper Spoiler
- (2) Spoiler Base
- (1) Roll of Double Sided Tape
- (6) Flanged Nuts


## Tools Required:

- Phillips Head Screw Driver
- Masking Tape
- Drill
- 1/8" and 5/16" Drill Bits
- 10mm Socket and Ratchet

**Step 1//** Thoroughly clean the factory deck lid with soap and water. Ensure the paint is free of any and all grease, oil, dirt, etc. It is highly recommended that you wipe the mounting surface down with isopropyl alcohol to ensure the cleanest possible surface. Allow the decklid time to dry completely.

**Step 2//** Assemble the upper spoiler to the left and right side spoiler bases using the provided Phillips head screws. **\*\*Note:** Do not over tighten.

**Step 3//** Apply the supplied double sided tape to the spoiler bases as shown.

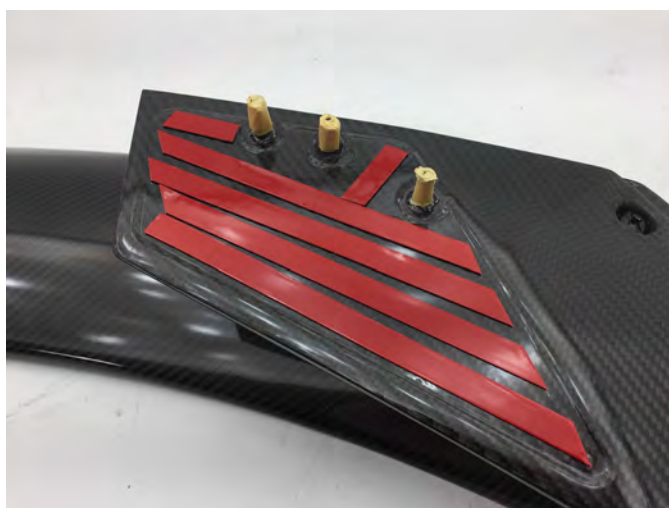

**Step 4//** Next, apply tape to the studs of the spoiler to avoid scratching the decklid paint. Center the spoiler on the back edge of the decklid and mark where you will need to drill the holes. Drill a 1/8" pilot hole. Finish drilling to a 5/16" hole. **\*\*Note:** The holes will need to be drilled slightly larger on the bottom side of the decklid to accommodate the flanged nut.

**Step 5//** Remove the tape from the mounting studs the tape backing from the double sided tape. Install the spoiler on the vehicle using the supplied flange nuts.



**Maintenance:** Wash the spoiler by hand using automotive car wash. Avoid brush style car washes.