

Rear Spoiler - Carbon Fiber (2015-2019)

****Installation Note:** Spoiler should be installed when the ambient air temperature is between 70-90 degrees Fahrenheit**

Contents:

- (1) Spoiler
- (1) Roll of Double Sided Tape
- (2) Adhesion Promoter


Step 1// Thoroughly clean the factory deck lid with soap and water. Ensure the paint is free of any and all grease, oil, dirt, etc. It is highly recommended that you wipe the mounting surface down with isopropyl alcohol to ensure the cleanest possible surface.

Step 2// Once the deck lid is clean and dry test fit the spoiler. Center it on the decklid. Familiarize yourself with how it fits.



Step 3// Next apply the supplied tape to the underside of the spoiler as shown below.

Step 4// Peel back the tape packing and wipe the tape's adhesive with the supplied adhesive promoter.

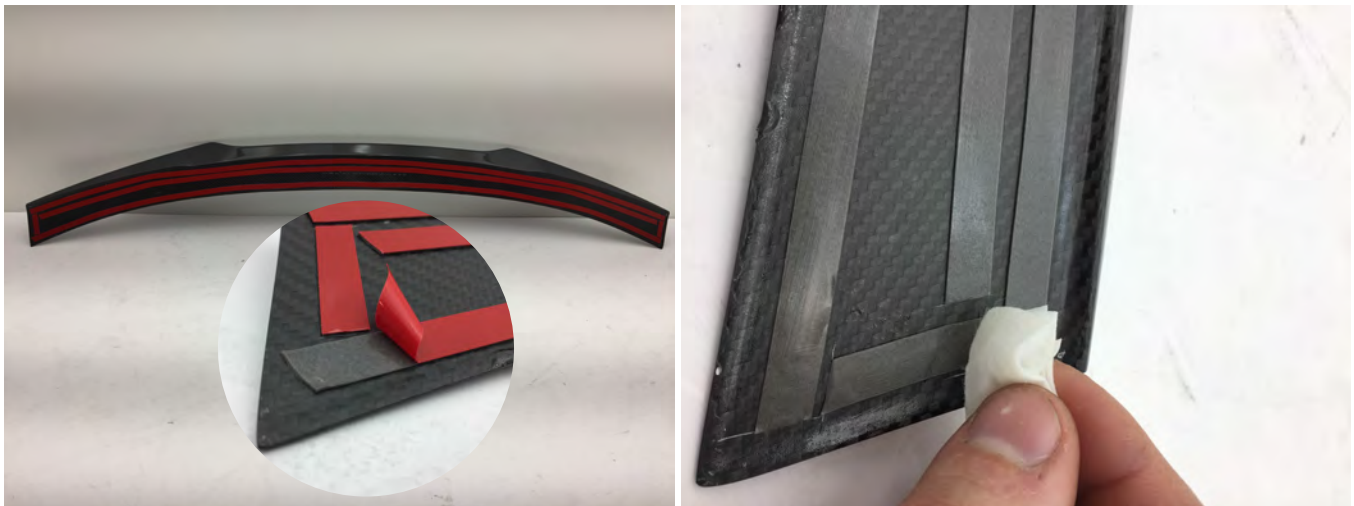

Step 5// Install the spoiler by centering it on the decklid. Apply firm even pressure on the spoiler to ensure proper adhesion.

Maintenance: Wash the spoiler by hand using automotive car wash. Avoid brush style car washes.