

# MP CONCEPTS

## Contents:

- (2) Diffuser LED Lights
- (4) Scotch Lock Connectors

## Tools Required:

- Jack & Jack Stands
- 10mm Socket
- Ratchet
- Cleaning Solution & Towel
- Electrical Tape
- Zip Ties

### Step 1:

Carefully support the vehicle using a jack & jack stands, or a lift. Once the vehicle is properly supported, locate and remove the 10mm nut securing the rear diffuser reflector in place. Then apply firm pressure on the tabs to release the deflector from the diffuser.




### Step 2:

Using a cleaning solution and a clean towel, clean the surface where the deflector was in place from any road debris.



### Step 3:

Insert the new MP Concepts light and wiring through the factory diffuser hole making sure the light clips into place. Then using the factory nut from Step 1, secure the light into place.

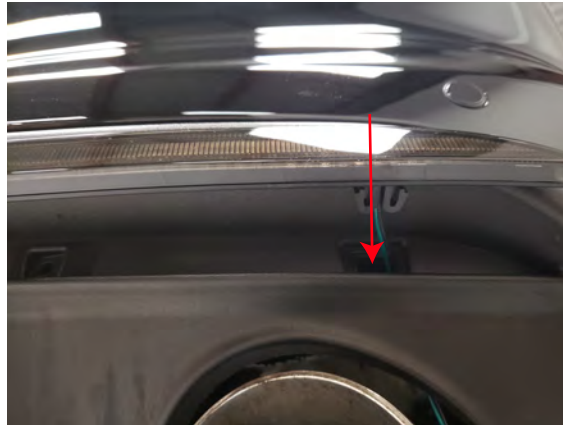

## LED Diffuser Markers 15-17 Mustang

### Step 4:

Locate, and unplug the rear side marker wiring harness.



### Step 5:

Carefully remove the factory electrical tape, and expose the factory two wires of the side marker harness. Using the supplied scotch locks, splice the 12+ volt Red wire from the MP Concepts light to the White w/Purple stripe wire from the factory side marker light. Then splice the 12- Black wire from the MP Concepts light into the Black wire from the factory side marker light.



**Step 6:**

Re-electrical tape the spliced in harness and factory harness protecting it from any road debris. Replug in the harness connector. Zip tie any loose wiring away from any damage that could occur.

**Step 7:**

Test the lights for proper function. Installation is now complete.

