

MP CONCEPTS


15-17 GT Style Tail Lights

Contents:
(2) Tail Lights

Tools Required:
10mm Sockets
Ratchet
Trim Panel Removal Tool

Step 1:

Remove the (4) twist on fasteners holding the truck panel in place. Then apply slight upward pressure to remove the panel from the trunk.

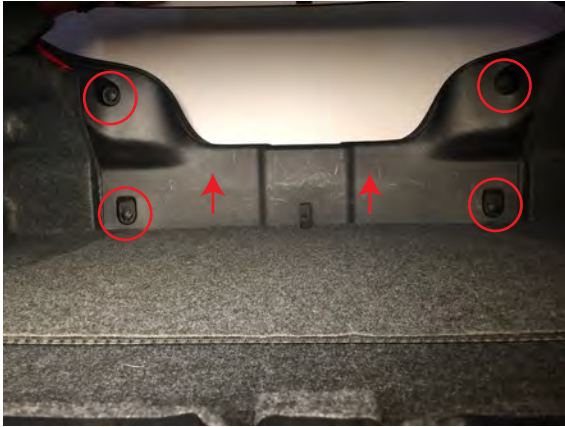


Step 2:

Using a trim panel removal tool, remove the plastic push clip holding the trunk liner in place.



Step 3:

Remove the (3) 10mm nuts securing the tail light to the vehicle. Unclip the wiring harness connector, and remove the taillight from the vehicle.

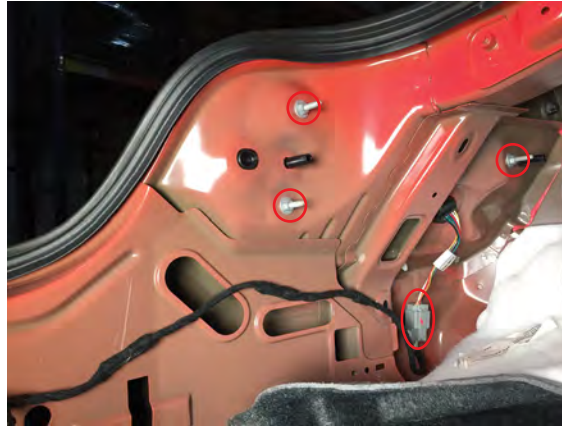


Step 4:

Remove the upper plastic trim panel from the factory tail light using a trim panel removal tool.



Step 5:

Transfer the trim panel to the new MP Concepts tail light.

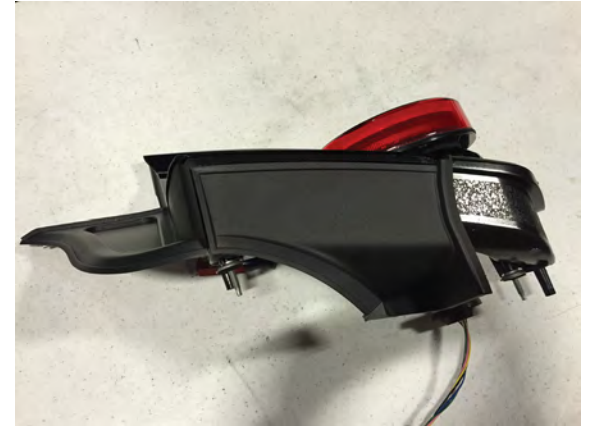

Step 6:

Install the tail light in reverse order.

