

### Tools Required:

- Jack & Jack Stands
- 7, 8mm Socket with Ratchet
- Flat Head Screw Driver
- Phillips Head Screw Driver

### Contents:

- (1) Chin Spoiler

**\*\*Note\*\* This Chin Spoiler Fits 18+ Mustang Base Models Only. Will not fit Power Pack / Track Pack Models.**

### Step 1:

Support the front of the car so you can access the bumper splash shield. Locate and remove the (3) push clips using a trim panel removal tool.




### Step 2:

Using a 7mm socket and ratchet, remove the splash shield.




### Step 3:

Remove the (3) push clips on the outer edge securing the corner of the factory chin spoiler.

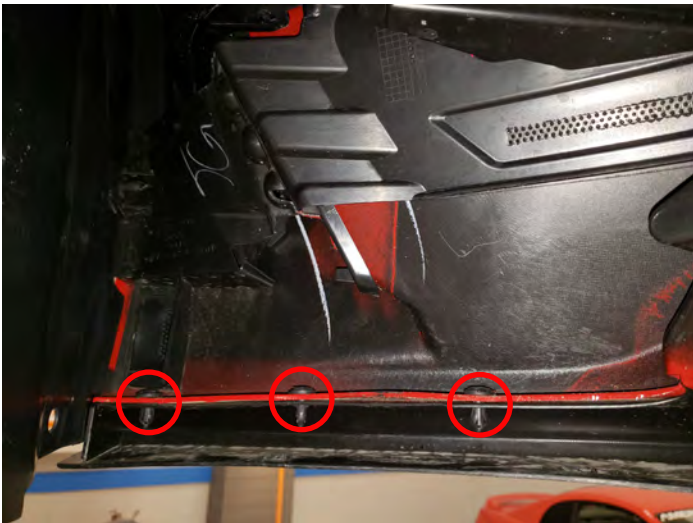

### Step 4:

Remove the (10) 8mm fasteners holding the chin spoiler to the bumper. Base and Performance pack cars are secured using similar hardware.

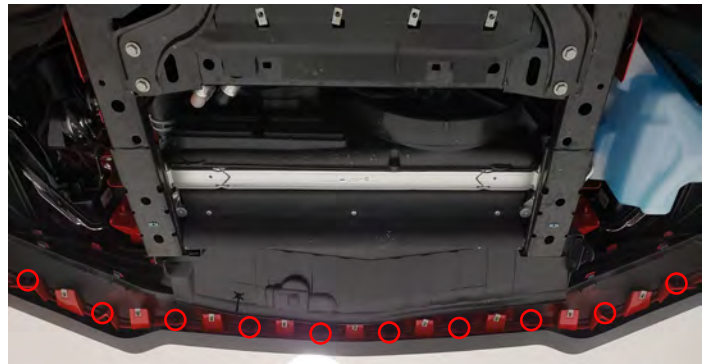

**Step 5:**

Remove the factory (1) metal speed clips using a flat head screw driver, and transfer them to the new Mp Concepts spoiler.



**Step 6:**

Install the new chin spoiler using the factory hardware in reverse order. Installation is now complete.

