



CHIN SPOILER ADAPTOR

(2018+ NON-TRACK PACK)

INSTALLATION INSTRUCTIONS


CONTENTS

(1) CHIN SPOILER ADAPTOR
(10) RIBBED PUSH RIVETS
(12) PUSH CLIPS

TOOLS REQUIRED

7MM SOCKET
RATCHET / IMPACT DRIVER
TRIM REMOVAL TOOL
1/4IN DRILL BIT
SCREW GUN

STEP 1

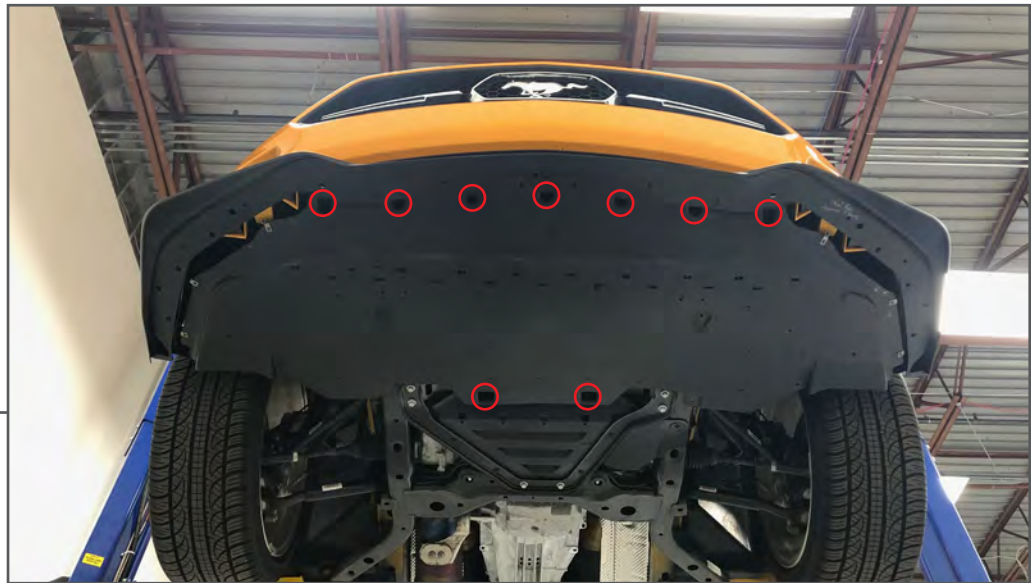

To begin the installation of the Chin Spoiler Adaptor, the chin spoiler must be fully installed on the bumper. The factory splash shield must be installed only using the front bolt location and two rear bolt locations, as shown. *** Installed bolt locations shown in RED

STEP 2



Slide the Chin Spoiler Adaptor in between the chin spoiler and factory splash shield. Using the (12) supplied push clips, secure the front of the adaptor to the bottom of the chin spoiler. Make sure the push clips press through both layers of material, you may need to feed your hand between the factory splash shield and the top of the adaptor to help the clip seat properly.

STEP 3



Hold the rear of the adaptor flat against the factory splash shield and drill out each hole location using a 1/4in drill bit. Install the (10) supplied ribbed push rivets. Similar to the front push clips, it may be necessary to apply pressure on the back side of the factory splash shield so the push rivets sit flush. You can do this by remove the two rear bolts holding the factory splash shield to gain access to the back side with your other hand.

STEP 4



Install (1) factory bolt in both corner locations, as shown. Finally, Install the remaining factory bolts/clips on the rear of the factory splash shield and at the bottom of the wheel wells.

FINAL



Appearance of fully installed Chin Spoiler Adaptor.