



---

# SMOKED LED SEQUENTIAL TURN SIGNALS

(2015-2017 Mustang excl. GT350)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

(1) LH Turn Signal  
(1) RH Turn Signal

### TOOLS REQUIRED

---

Plastic Pry Tool  
5.5, 7, 8mm Sockets and  
Ratchet  
Flat Head Screw Driver  
Pliers

SKU # 408222

## STEP 1



Remove the (8) clips securing the plastic radiator cover to the radiator support and remove it from the vehicle.

## STEP 2



Remove the (6) 8mm and (2) 5.5mm bolts securing the bumper cover to the radiator support.

## STEP 3




Support the front of the car so you can access the bumper splash shield. \*\*Note there are two versions of the splash shield. Both are attached to similar locations.

## STEP 4



On each side of the bumper, remove the plastic clips holding the fender liner to the bumper.

## STEP 5

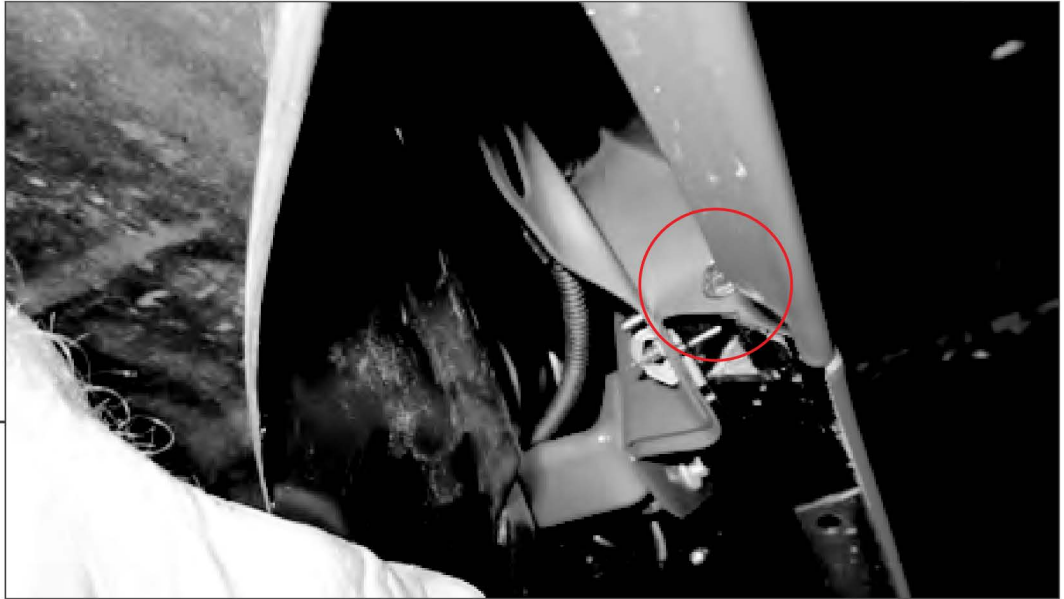

Fold back the fender liner so that you can access the one bolt that holds the bumper to the fender. Once removed, firmly pull the sides of the bumper away from the fender.


## STEP 6



With the splash shield pulled back, you can access the plugs for the turn signals and fog lights. Then remove bumper.




## STEP 7

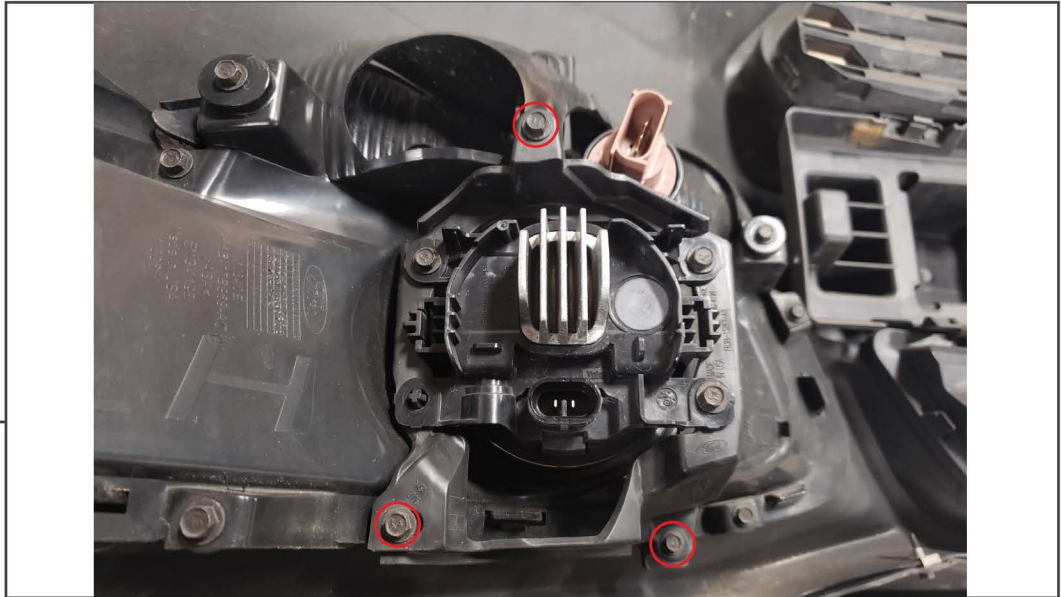

Remove the (3) 7mm screws securing the factory fog light to the fog light bezel. Remove the fog light.

## STEP 8

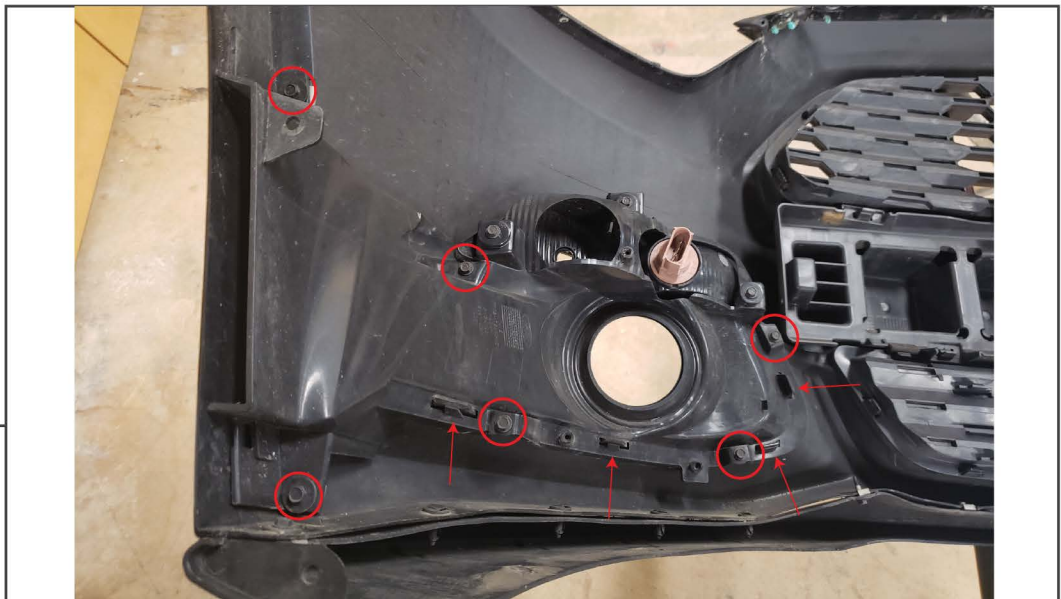


Remove the (6) 7mm screws securing the fog light bezel to the bumper. Carefully pry on the plastic tabs to release the bezel from the bumper. Remove the bezel.

## STEP 9



Remove the (3) 7mm screws securing the factory turn signal light to the fog light bezel. Remove the turn signal light. Install the replacement LED light using the factory hardware.

## STEP 10

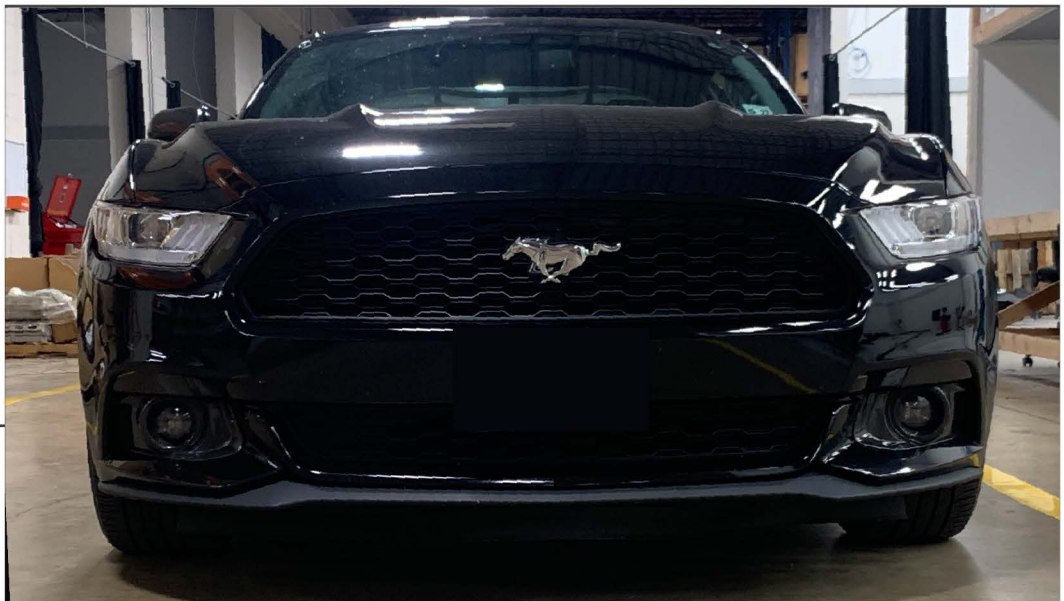

Follow steps 1-8 in reverse order to reassemble the front bumper. Installation is now complete.