

2010-2012 DECKLID PANEL

BEFORE BEGINNING

Be sure to thoroughly clean the trunk lid area before installation, this will ensure a clean and secure adhesive bond.


ESTIMATED TIME 30 Minutes



Using the supplied alcohol pad, wipe down the perimeter of the trunk lid where the tape will contact.



Once you have lined up the decklid panel, press firmly to set the adhesive tape. ***The panel should be flush with the left and right edges of the trunk lid, and parallel with the top crease.***

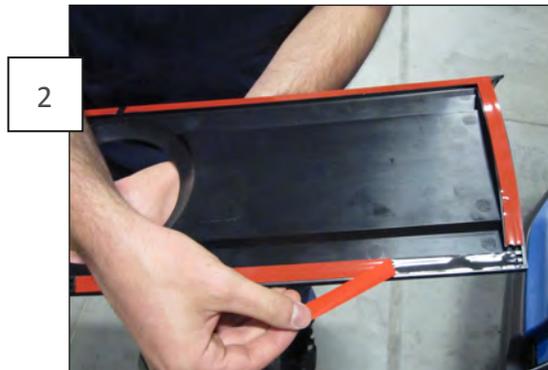

Peel the backing off the tape and line up the decklid panel on the trunk lid. ***It may help to test fit the decklid before peeling off the backing of the tape so you can see how everything is going to line up before the final installation.***

MMD
MODULAR MUSCLE DESIGN