



ELEANOR STYLE SCOOPS

(2005-2014 MUSTANG Coupe)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Eleanor Style Scoop
- (1) RH Eleanor Style Scoop
- (4) Mesh Blanks
- (1) Tape Kit
- (4) Alcohol Pads
- (4) Adhesion Promoters

TOOLS REQUIRED

- Detailer/Soap
- Microfiber Towel
- Scissors/Utility Knife
- Tin Snips/Wire Cutters
- Tape Measure



STEP 1

Using the supplied Adhesion Promoter, thoroughly wipe down the two cross-hatched areas and all edges where double-sided tape will be applied.



STEP 2


Trim and place strips of tape on the areas shown in the below photo:



STEP 3

Using the supplied Alcohol Prep Pads, thoroughly clean the area around the rear quarter windows where the scoops will be placed.

MAKE SURE YOUR VEHICLE HAS BEEN THOROUGHLY CLEANED WITH AUTOMOTIVE SOAP AND WATER BEFORE THIS STEP.

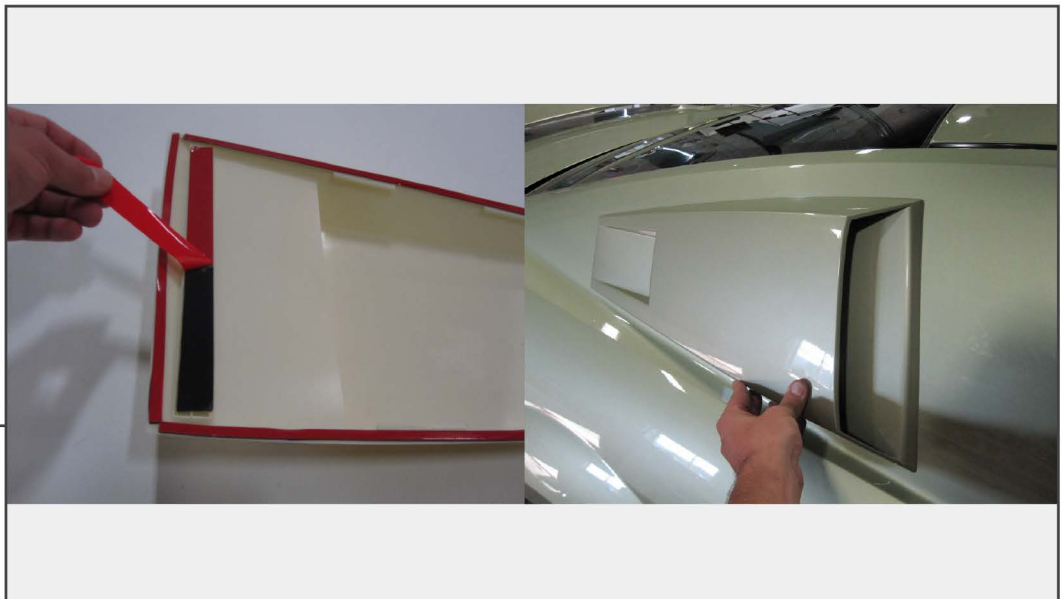

STEP 4

Peel the backing from the tape on the scoops and lightly place them on the vehicle in desired location. Make sure the scoop covers the entire window and is parallel with the body line. Once they are in the desired location, press down firmly to fully seat the adhesive tape.