

2005-2013 CLASSIC WINDOW LOUVERS



Before beginning, thoroughly clean the quarter windows to make sure they are clean and free of any dirt or contaminants.

To ensure a strong bond, please make sure you use the alcohol prep pads and 3M Adhesion Promoter as illustrated in the instructions.



Using the supplied 3M Adhesion Promoter Pad, thoroughly wipe down the mounting points on the louver as well as the outside of the quarter window where the louvers will adhere. ***Only use one Adhesion Promoter Pad per side***




Peel the backing from the 3M Dual-Lock and place the louver lightly over the quarter window starting with the rear most portion as shown. Do not press down on the louver to fully seat the adhesive at this point.



Using the supplied alcohol prep pad, wipe down the mounting points on the louver as well as the outside of the quarter window where the louvers will adhere. ***Only use one alcohol pad per side***



Place the supplied 3M Dual-Lock on the louvers' mounting points, then attach the mate to each of the six Dual-Lock strips that were just adhered to the louver.

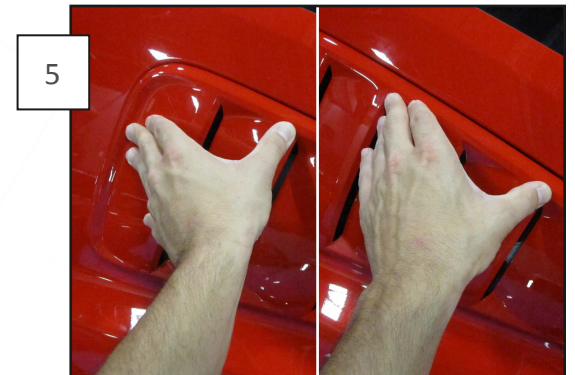

Once the louver is properly positioned around the quarter window, firmly press down around the entire edge of the louver to fully lock in the Dual-Lock. Repeat Steps 1-5 for opposite side louver to complete the installation. ***To clean, separate the 3M Dual-Lock by pulling up from one of the corners***

MMD
MODULAR MUSCLE DESIGN