

2005-2013 SIDE SCOOPS

BEFORE BEGINNING


Before beginning, be sure to thoroughly clean the areas of the vehicle where the side scoops will adhere.

TOOLS REQUIRED *Exacto Knife / Scissors*

ESTIMATED TIME *1 Hour*



Wipe down the edges on the reverse side of the side scoop with the included 3M Adhesion Promoter as shown.

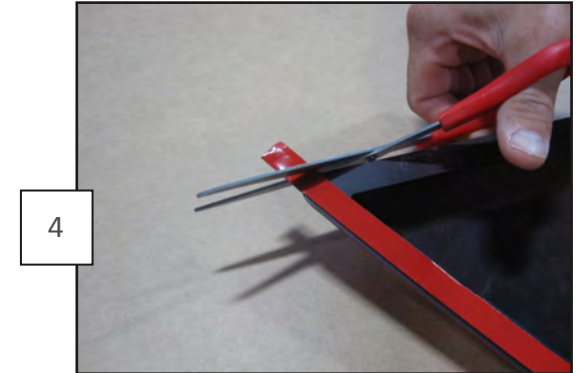


Again starting toward the bottom, apply the included 15" x 1/2" strip of adhesive to the side scoop. Using a razor blade or scissors, trim any excess tape from the top of the scoop as shown.



Starting at the bottom of the scoop, apply the included 5" x 1/4" strip of adhesive to the tape ledge. Be careful to not create any buckles or raised areas when bending the adhesive around the edge.



Lastly, apply the 9" x 1/2" strip of adhesive to the side scoop and trim the excess where it meets the longer side piece.

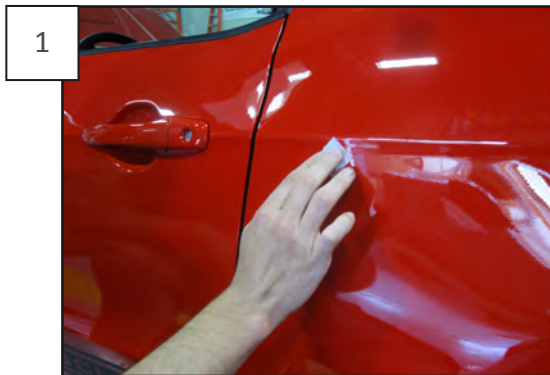

Using the supplied alcohol pad, wipe down the area of the quarter panel where the side scoop will attach. This will ensure a clean surface for the adhesive tape to bond with.

6



Carefully peel the backing away from the adhesive and install the scoop onto the vehicle, using the upper & lower body lines as guidance for placement. The scoop should sit about ¼" back from the door as shown. Do not press down to fully set the adhesive at this point.

Once the scoop is properly aligned on the vehicle, press down firmly around the outer edges to fully seat the adhesive. Repeat Steps 1-6 for the opposite side to complete the installation